

Necta

Opera Touch

Complete Wrap Branding Guide

Measurements & other information
to help create and install your visuals



Table of Content

<i>Introduction.....</i>	<i>2</i>
<i>BacklitBranding.....</i>	<i>3</i>
<i>FrontMeasurements.....</i>	<i>4</i>
<i>SidesMeasurements.....</i>	<i>5</i>
<i>Rivets' SizeandLocation.....</i>	<i>6</i>
<i>HelpfulInformation.....</i>	<i>7</i>



Introduction

This document contains every mensuration and information necessary to help you prepare your wrapping material and/or print your branded visuals.

Please use this guide as a tool, not as a template. As is often the case when products are built on assembly lines, variations may occur, especially in the rivets' placement. The material used for the wrap and its flexibility can also impact the format, size and die cuts.



We recommend using the services of a professional in wrapping for better results as this document only highlight helpful information but is not a complete step by step guide.

Please also note that **all document measurements are given in inches.**

Backlit Branding


The backlit panels on the Opera Touch can be branded to supplement the look. The material used lets the light come through, which add emphasis on the message, visuals and/or logos.

Contact us for branding design and printing fees or create your own visuals. Simply use the template on our website (use QR code on the right to access it) and use recommended material when printing.

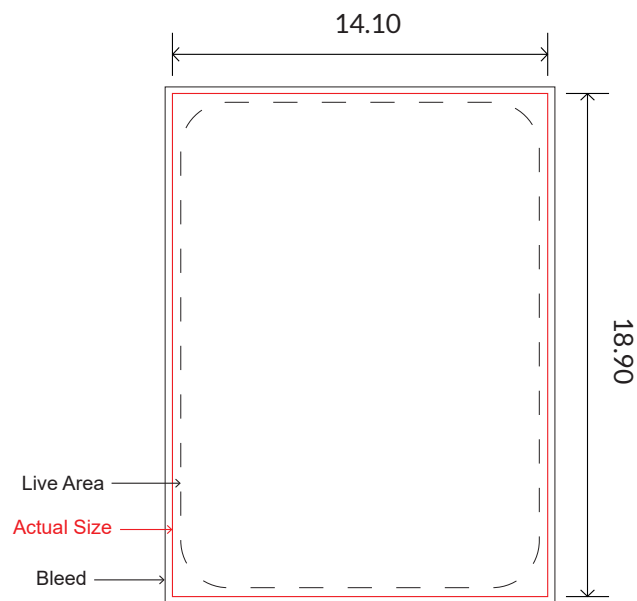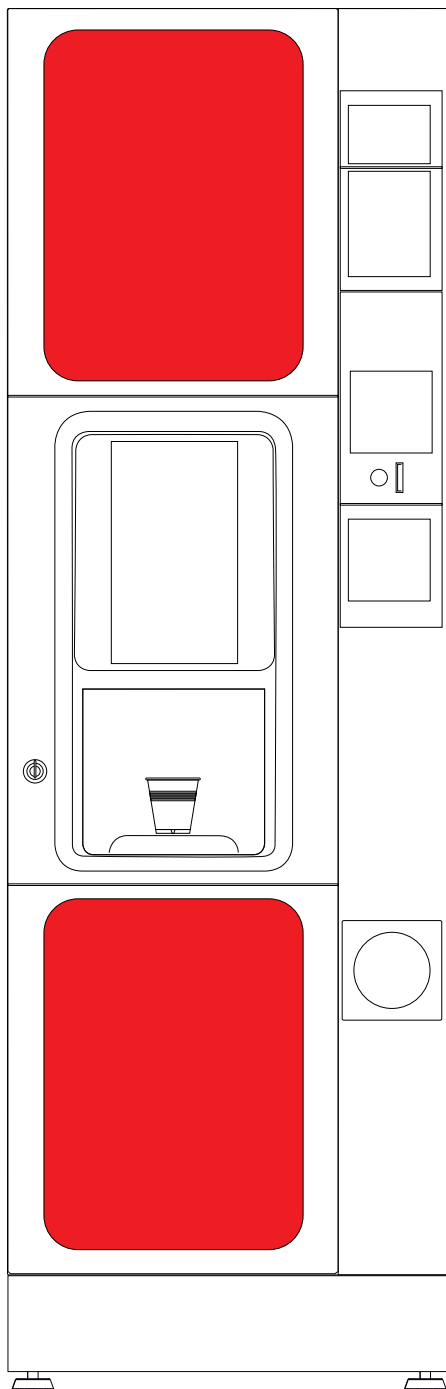


Front Measurements

Mensuration doesn't include incurved segments of the machine, only straight surfaces for better application and material adhesion. This will be the case for every layout in this document.

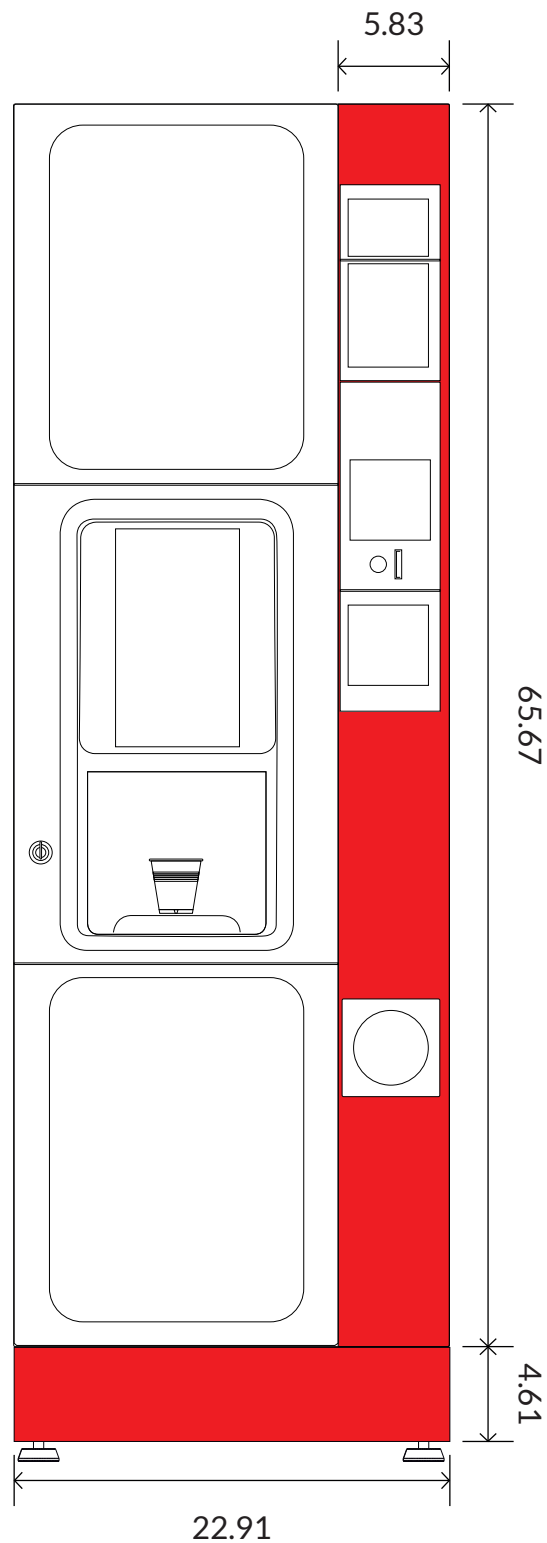

Sides Measurements


Those measurements are the same on each side of the machine (right and left), but inverted on the vertical axis.

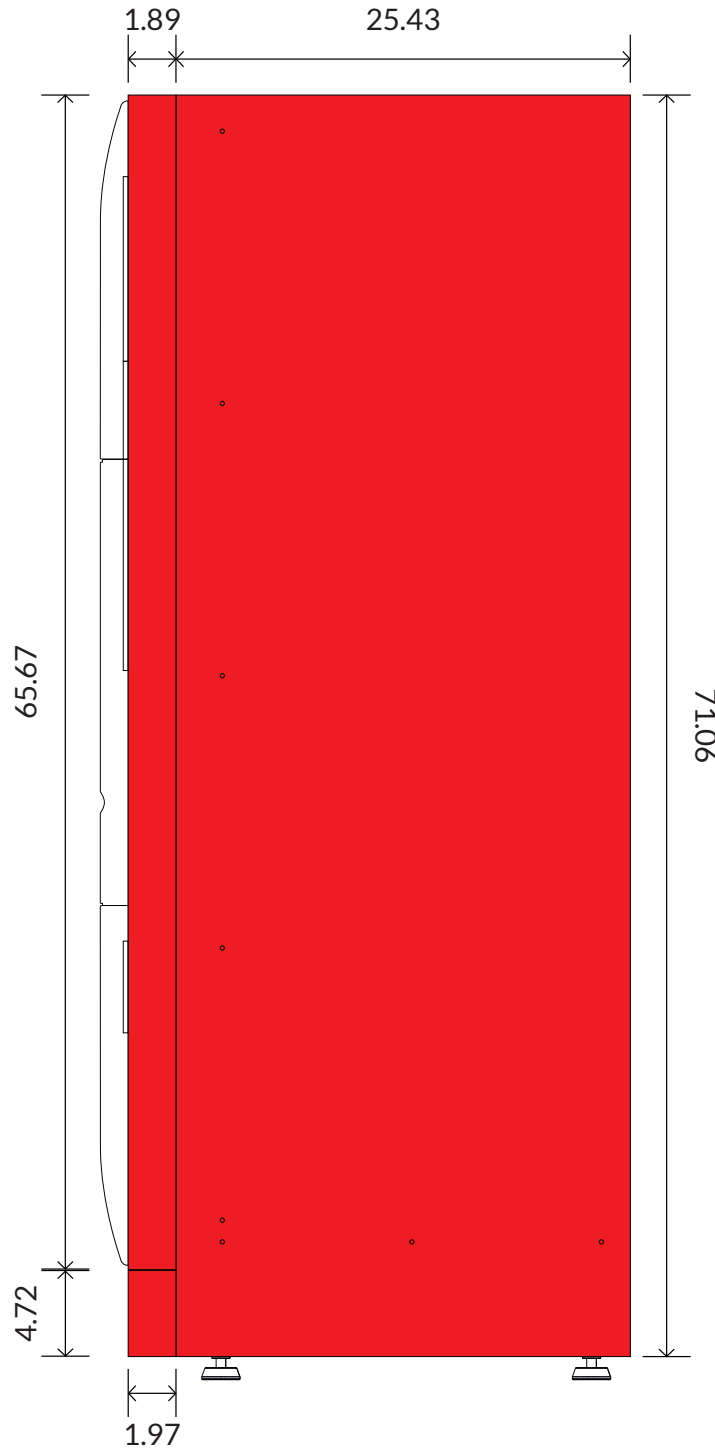

Rivets' Size and Location


Those measurements are the same on each side of the machine (right and left), but inverted on the vertical axis.

Rivets placement is approximate, they may not be in the same location. We recommend using wrapping techniques, then cutting the material in their exact position.

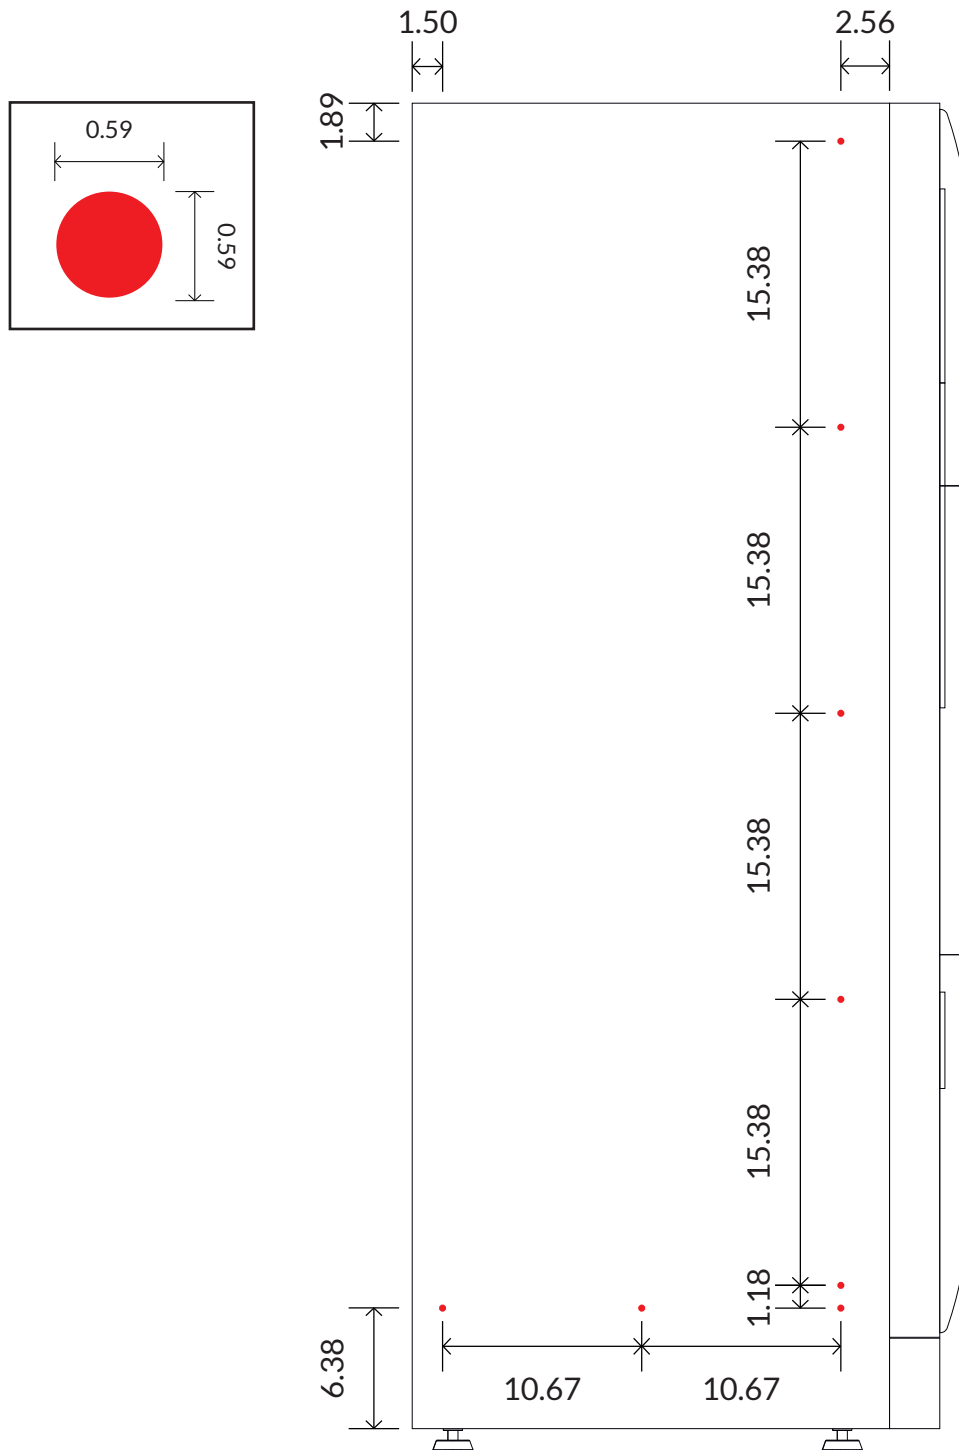


Helpful Information

If you cover all of the branding zones in this document, the right corner of the front door will be completely covered by your visuals. It could be easier to drape this whole zone with only one piece of material. To do so, please take note of the other helpful information on page 8 and 9.

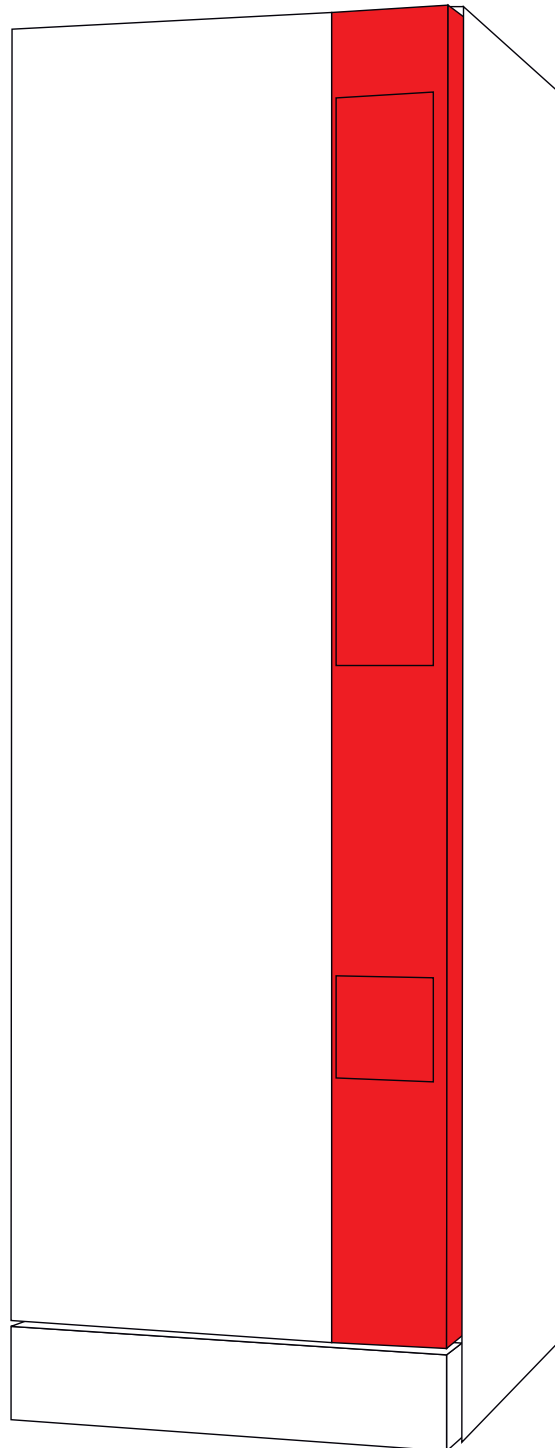

Helpful Information (next)

A few components for payment systems placed in the door (highlighted in red in this schema) can be removed to help the wrap installation. Simply open the front door, disconnect the wiring and remove all three pieces.

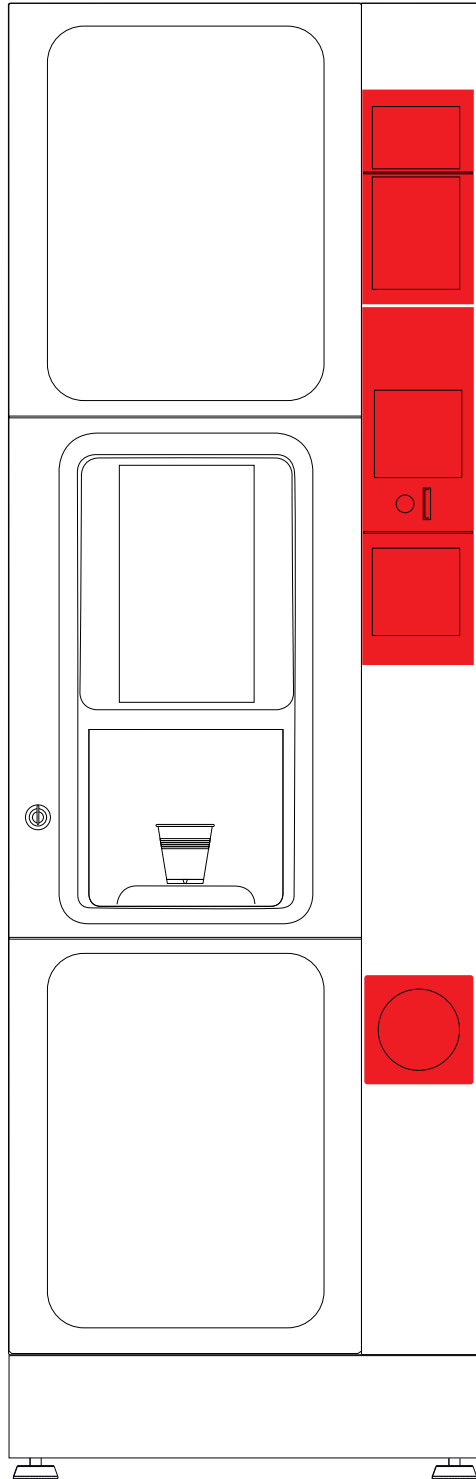

Helpful Information (next)

The machine front door's hinges are installed on its right side. Please keep in mind those two joints pieces when preparing/installing your branding materials, as they may be in the way. Position and size will vary.

