

HOW TO USE THE KITS								
Cycles	25,000 (or 12 months)	50,000 (or 24 months)	75,000 (or 36 months)	100,000 (or 48 months)	125,000 (or 60 months)	150,000 (or 72 months)	175,000 (or 84 months)	200,000 (or 96 months)
Reference kit	KIT A	KIT B	KIT A	KIT C + SUGGESTED PARTS TO BE INSPECTED	KIT A	KIT B	KIT A	KIT C + SUGGESTED PARTS TO BE INSPECTED

PLAN FOR MACHINE WITH **Z4000 ES/FB, 2BTC, 5EV**


KIT A: MAINTENANCE AFTER 25000 CYCLES (OR 12 MONTHS).....COD. **267246**

KIT B: MAINTENANCE AFTER 50000 CYCLES (OR 24 MONTHS).....COD. **267768**

KIT C: MAINTENANCE AFTER 100000 CYCLES (OR 48 MONTHS).....COD. **267769**

SUGGESTED PARTS TO BE INSPECTED AFTER 100000 CYCLES (OR 48 MONTHS)

- ✓ GRINDER ASSEMBLY
- ✓ BOILER ASSEMBLY
- ✓ Z4000 COFFEE GROUP
- ✓ COFFEE GROUP MOTOR

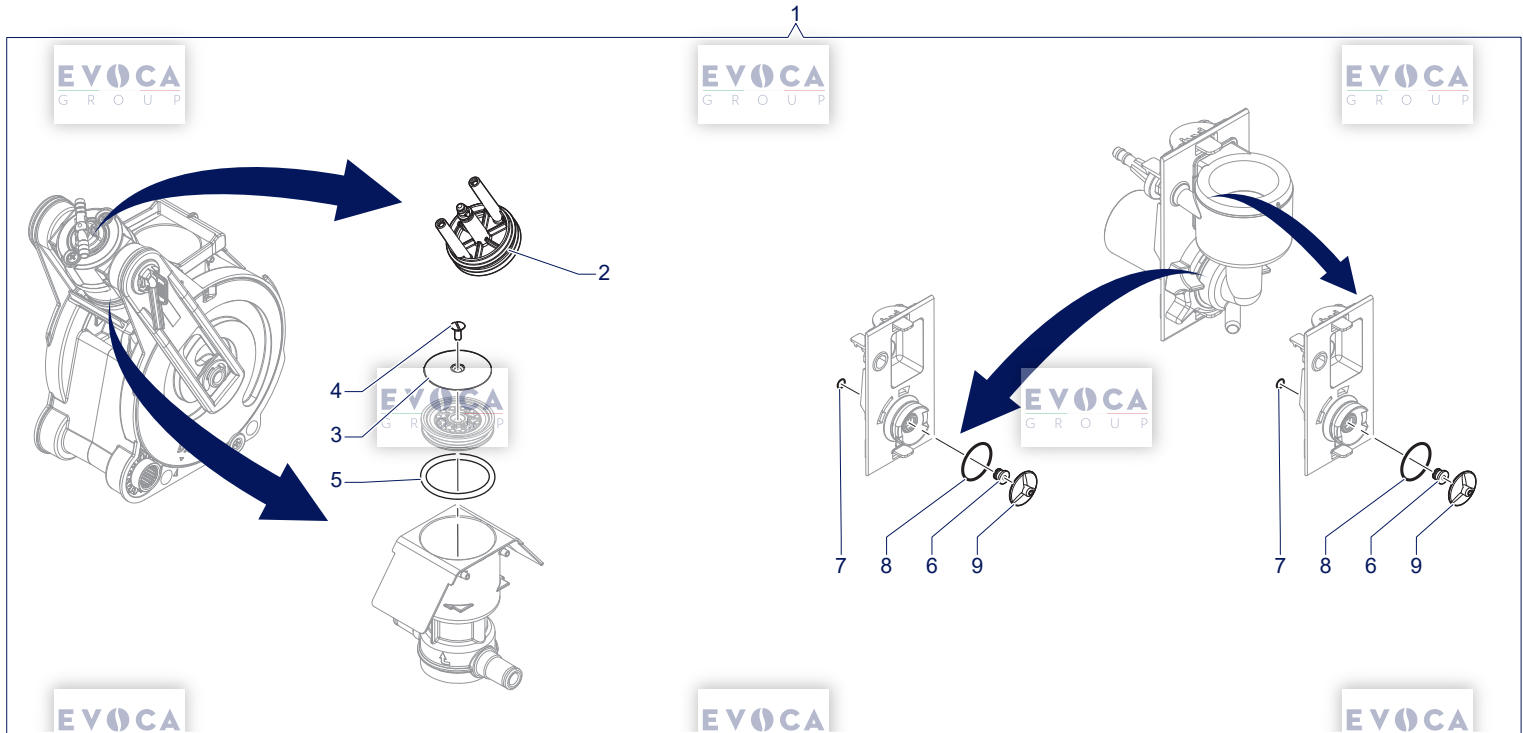

Controlli generali

- controllare i contenitori polveri: svuotare i contenitori, pulire con detergente neutro, sostituire eventuali componenti danneggiati anche se non presenti in questo esploso.
- controllare il vassoio scarico liquidi: pulire con detergente neutro, controllare il tubo scarico liquidi se presente, verificare il corretto funzionamento del sensore di presenza del vassoio liquidi.
- controllare il contenitore scarico caffè: pulire con detergente neutro, verificare il corretto funzionamento del sensore di presenza del contenitore scarico caffè.
- controllare l'erogazione delle bevande: verificare che la qualità/quantità dell'erogato in tazza rispetti i requisiti standard.
- controllare il tubo ingresso acqua (se presente): verificare la presenza di perdite e/o danni al tubo.
- controllare/sostituire il filtro addolcitore dell'acqua.

General checks:


- check the powder canisters: empty the canisters, clean with neutral detergent, if present replace any damaged component that is not included in the kit.
- check the liquid drip tray: clean with neutral detergent, check the liquid discharge tube if mounted, verify the correct operation of the liquid drip tray presence sensor.
- check the coffee grounds bin: clean with neutral detergent, verify the correct operation of the coffee grounds bin presence sensor.
- check the programmed beverages erogation: verify that the quality of doses delivered from the machine has the required standard.
- check the water inlet tube (if present): verify the presence of leaks and possible crush of the tube.
- check/replace the water filter-softener.

W100/GS MASTERBREW_Z4000 ES/FB MODELS
KIT A: maintenance after 25000 cycles (or 12 months)



POS.	COD.	IT	EN	Q.TY
1	267246	MAINTENANCE KIT_A_Z4000 ES/FB_W100/GS MASTERBREW	MAINTENANCE KIT_A_Z4000 ES/FB_W100/GS MASTERBREW	1
2	266009	ASSIEME PISTONE SUPERIORE CON FILTRO CAFFE'	UPPER PISTON ASSEMBLY WITH COFFEE FILTER	1
3	251755	FILTRO CAFFÈ DIAM. 42	COFFEE FILTER-DIA 42-Z3/4000	1
4	261474	VITE M4X10 CON FRENAFILETTI	FILTER SCREW - M4X10 - Z4000	1
5	251757	GUARNIZIONE OR AL SILICONE	SILICONE OR SEAL GASKET	1
6	097917	BOCCOLA DI TENUTA -ESCLUSIVA	BUSH SEAL - WHIPPER	2
7	0V0775	GUARNIZIONE OR 106	O-RING 106	2
8	261256	GUARNIZIONE 31.42X2.62	O RING - MIXER - 9100	2
9	260109	VENTOLINA MIXER ALBERO 4MM	WHIPPER BLADE - 9100	2



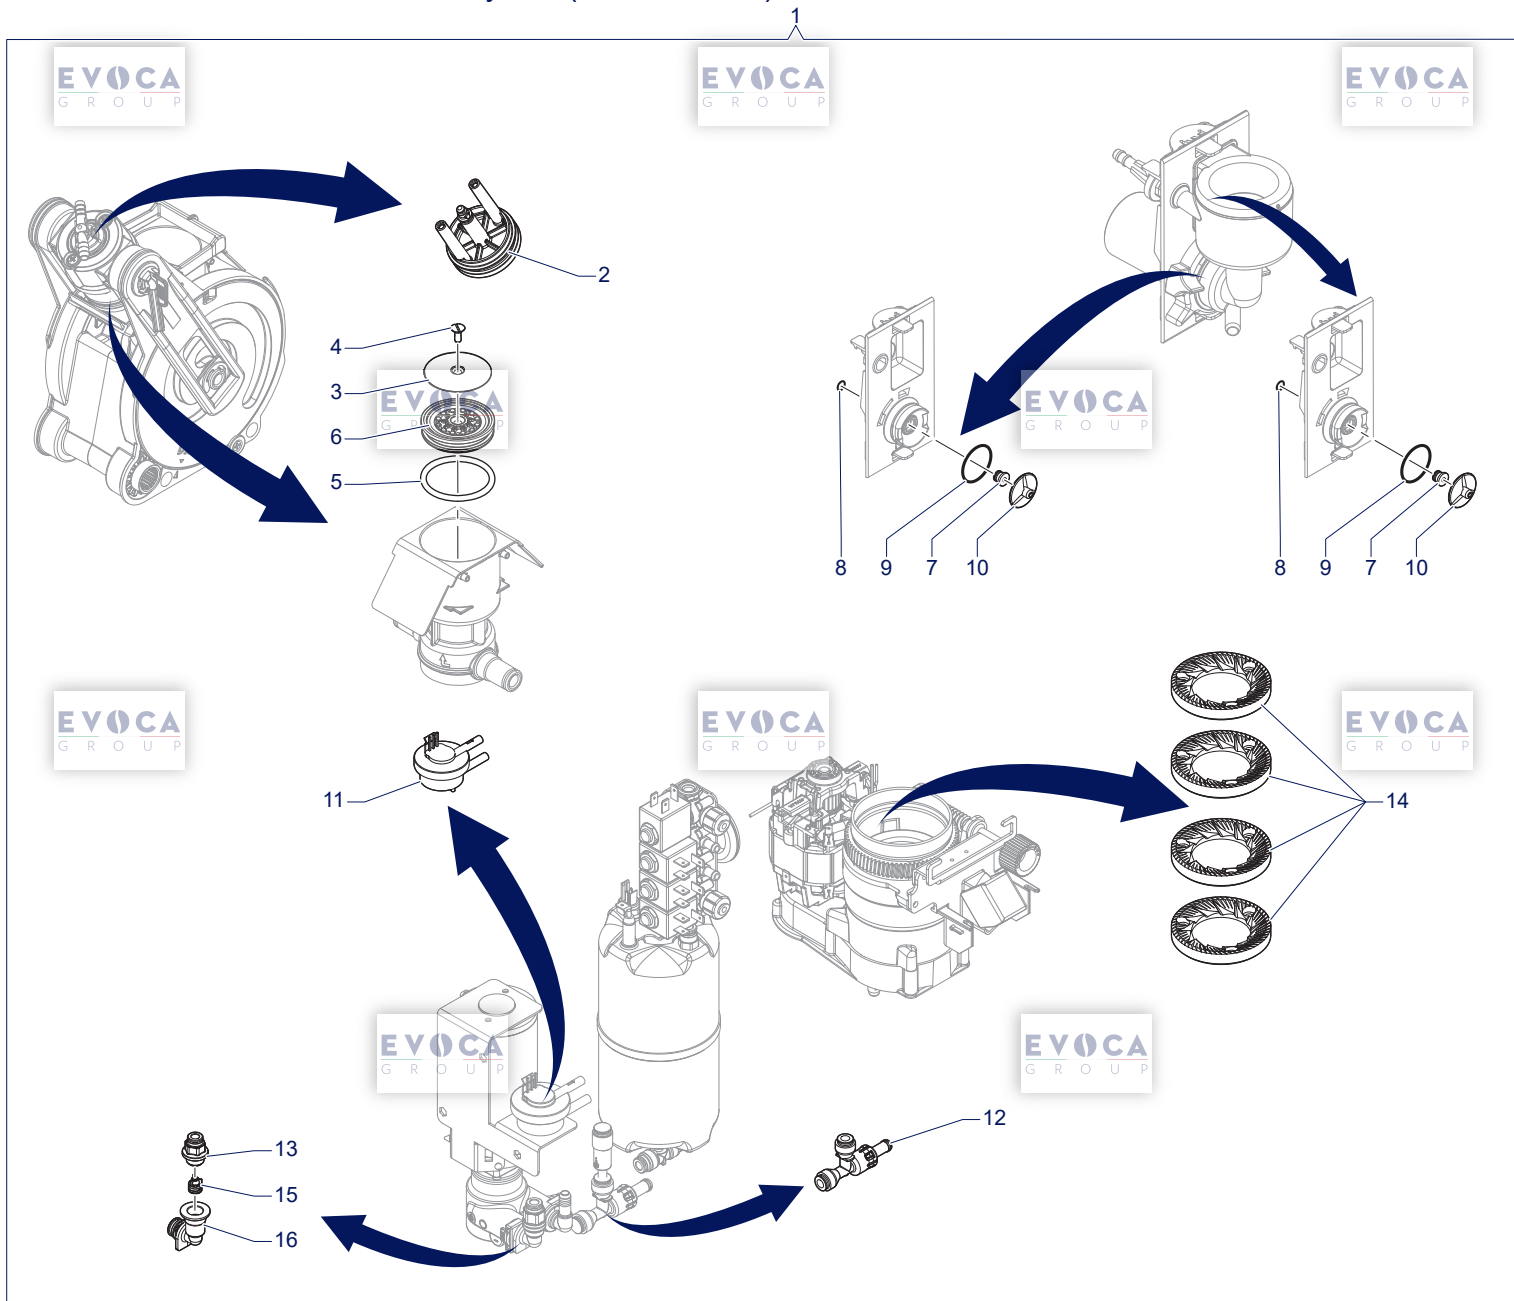

Controlli generali

- controllare i contenitori polveri: svuotare i contenitori, pulire con detergente neutro, sostituire eventuali componenti danneggiati anche se non presenti in questo esploso.
- controllare il vassoio scarico liquidi: pulire con detergente neutro, controllare il tubo scarico liquidi se presente, verificare il corretto funzionamento del sensore di presenza del vassoio liquidi.
- controllare il contenitore scarico caffè: pulire con detergente neutro, verificare il corretto funzionamento del sensore di presenza del contenitore scarico caffè.
- controllare l'erogazione delle bevande: verificare che la qualità/quantità dell'erogato in tazza rispetti i requisiti standard.
- controllare il tubo ingresso acqua (se presente): verificare la presenza di perdite e/o danni al tubo.
- controllare/sostituire il filtro addolcitore dell'acqua.

General checks:

- check the powder canisters: empty the canisters, clean with neutral detergent, if present replace any damaged component that is not included in the kit.
- check the liquid drip tray: clean with neutral detergent, check the liquid discharge tube if mounted, verify the correct operation of the liquid drip tray presence sensor.
- check the coffee grounds bin: clean with neutral detergent, verify the correct operation of the coffee grounds bin presence sensor.
- check the programmed beverages erogation: verify that the quality of doses delivered from the machine has the required standard.
- check the water inlet tube (if present): verify the presence of leaks and possible crush of the tube.
- check/replace the water filter-softener.


GS MASTERBREW -USA-_Z4000 ES/FB MODELS

KIT B: maintenance after 50000 cycles (or 24 months)



POS.	COD.	IT	EN	Q.TY
1	267768	MAINT.KIT_B_Z4000 ES/FB_GS MASTERBREW -USA-	MAINT.KIT_B_Z4000 ES/FB_GS MASTERBREW -USA-	1
2	266009	ASSIEME PISTONE SUPERIORE CON FILTRO CAFFE'	UPPER PISTON ASSEMBLY WITH COFFEE FILTER	1
3	251755	FILTRO CAFFE' DIAM.42	COFFEE FILTER-DIA 42-Z3/4000	1
4	261474	VITE M4X10 CON FRENAFILETTI	FILTER SCREW - M4X10 - Z4000	1
5	251757	GUARNIZIONE OR AL SILICONE	SILICONE OR SEAL GASKET	1
6	256748	PISTONE INF. 10MM Z4000 ES/FB	BOTTOM PISTON 10MM Z4000 ES/FB	1
7	097917	BOCCOLA DI TENUTA -ESCLUSIVA	BUSH SEAL - WHIPPER	2
8	0V0775	GUARNIZIONE OR 106	O-RING 106	2
9	261256	GUARNIZIONE 31.42X2.62	O RING - MIXER - 9100	2
10	260109	VENTOLINA MIXER ALBERO 4MM	WHIPPER BLADE - 9100	2
11	258625	CONTATORE VOLUMETRICO D.1.8 -BIANCO-	VOL. CNTR D.1.8 -WHITE-OP/91 E-	1
12	266758	BY-PASS -12 BAR-	BY-PASS -12 BAR-	1
13	266964	RACCORDO "L" G1/4	FITTING "L" G1/4	1
14	254469	MACINA-16 DENTI ROTTURA-	GRINDER BLADE-KOB/CA/KA/91/LR	4
15	267335	VALVOLA NON RITORNO	CHECK VALVE	1
16	267336	ATTACCO RAPIDO Ø6 G1/4	QUICK-RELEASE COUPLING Ø6 G1/4	1



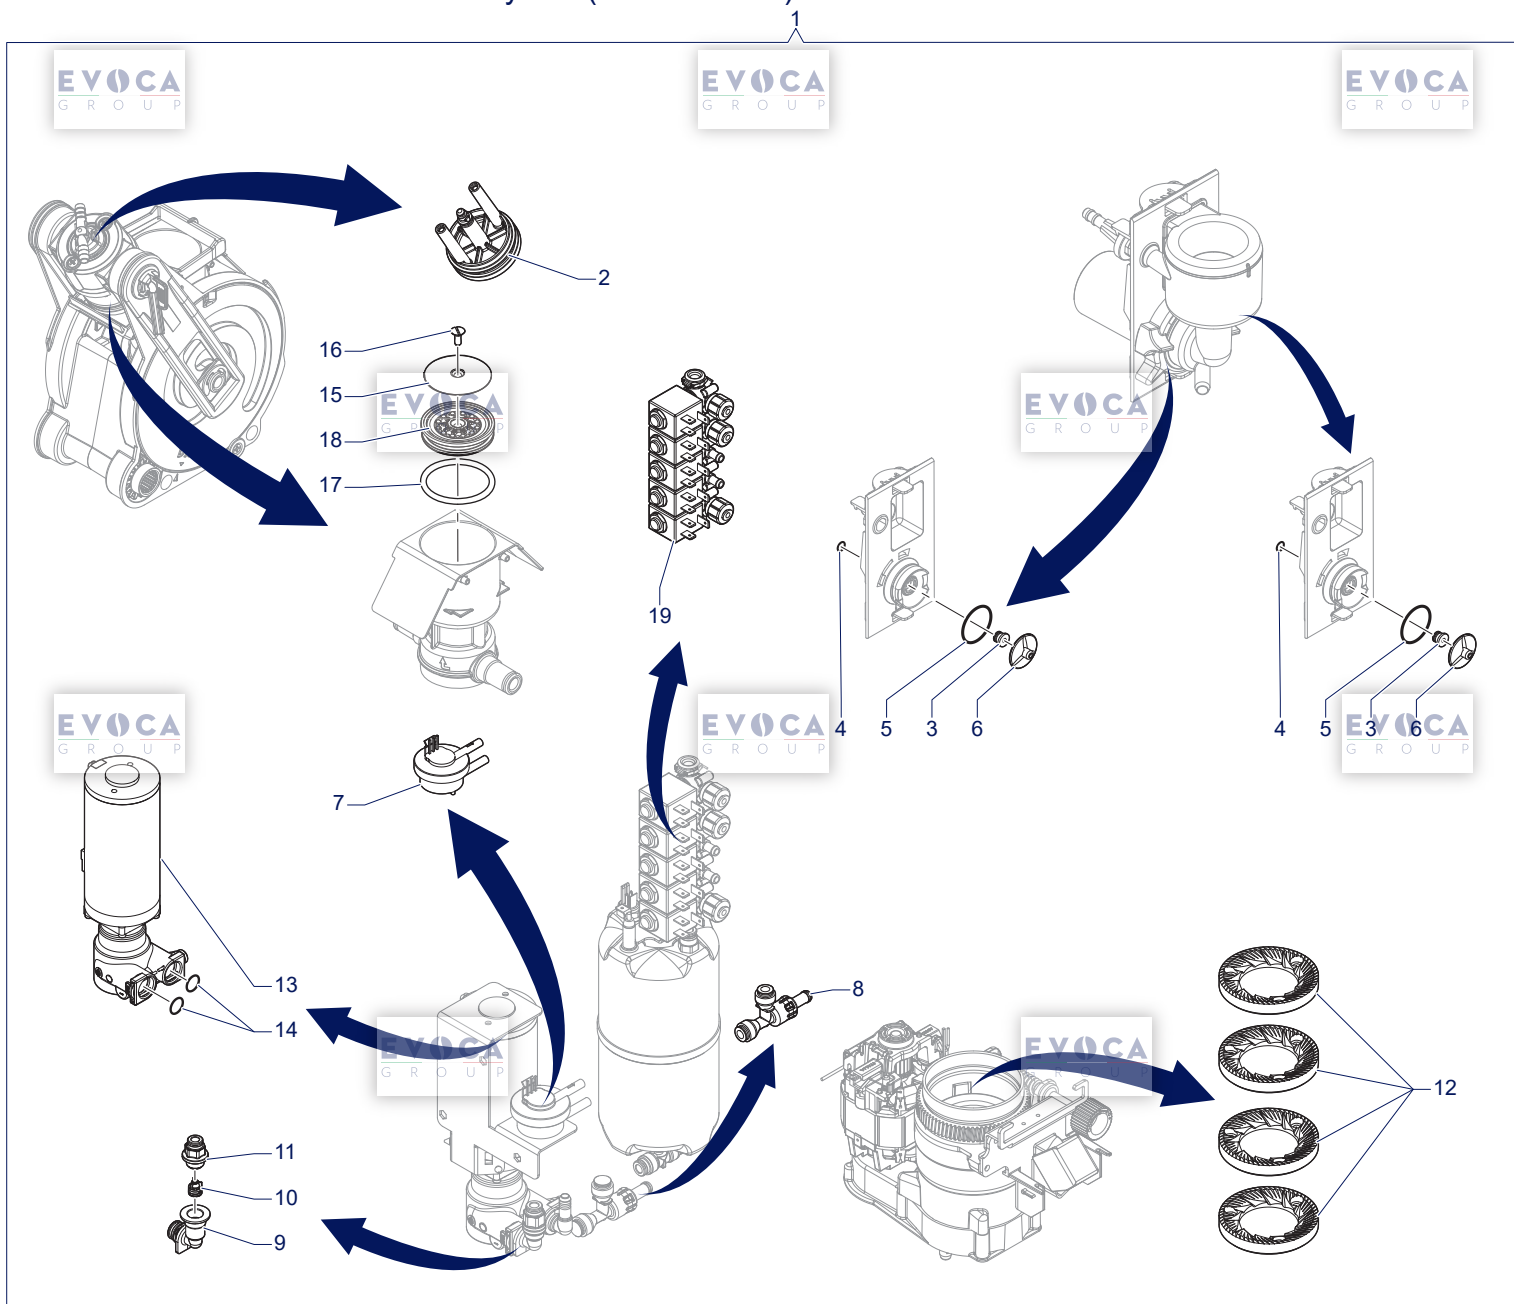

Controlli generali

- controllare i contenitori polveri: svuotare i contenitori, pulire con detergente neutro, sostituire eventuali componenti danneggiati anche se non presenti in questo esploso.
- controllare il vassoio scarico liquidi: pulire con detergente neutro, controllare il tubo scarico liquidi se presente, verificare il corretto funzionamento del sensore di presenza del vassoio liquidi.
- controllare il contenitore scarico caffè: pulire con detergente neutro, verificare il corretto funzionamento del sensore di presenza del contenitore scarico caffè.
- controllare l'erogazione delle bevande: verificare che la qualità/quantità dell'erogato in tazza rispetti i requisiti standard.
- controllare il tubo ingresso acqua (se presente): verificare la presenza di perdite e/o danni al tubo.
- controllare/sostituire il filtro addolcitore dell'acqua.

General checks:

- check the powder canisters: empty the canisters, clean with neutral detergent, if present replace any damaged component that is not included in the kit.
- check the liquid drip tray: clean with neutral detergent, check the liquid discharge tube if mounted, verify the correct operation of the liquid drip tray presence sensor.
- check the coffee grounds bin: clean with neutral detergent, verify the correct operation of the coffee grounds bin presence sensor.
- check the programmed beverages erogation: verify that the quality of doses delivered from the machine has the required standard.
- check the water inlet tube (if present): verify the presence of leaks and possible crush of the tube.
- check/replace the water filter-softener.

GS MASTERBREW -USA-_Z4000 ES/FB_5EV MODELS

KIT C: maintenance after 100000 cycles (or 48 months)



POS.	COD.	IT	EN	Q.TY
1	267769	MAINT.KIT_C_Z4000 ES/FB_5EV_GS MASTERBREW -USA.-	MAINT.KIT_C_Z4000 ES/FB_5EV_GS MASTERBREW -USA-	1
2	266009	ASSIEME PISTONE SUPERIORE CON FILTRO CAFFE'	UPPER PISTON ASSEMBLY WITH COFFEE FILTER	1
3	097917	BOCCOLA DI TENUTA -ESCLUSIVA	BUSH SEAL - WHIPPER	2
4	0V0775	GUARNIZIONE OR 106	O-RING 106	2
5	261256	GUARNIZIONE 31.42X2.62	O RING - MIXER - 9100	2
6	260109	VENTOLINA MIXER ALBERO 4MM	WHIPPER BLADE - 9100	2
7	258625	CONTATORE VOLUMETRICO D.1.8 -BIANCO-	VOL. CNTR D.1.8 -WHITE-OP/91 E-	1
8	266758	BY-PASS -12 BAR-	BY-PASS -12 BAR-	1
9	266964	RACCORDO "L" G1/4	FITTING "L" G1/4	1
10	267335	VALVOLA NON RITORNO	CHECK VALVE	1
11	267336	ATTACCO RAPIDO Ø6 G1/4	QUICK-RELEASE COUPLING Ø6 G1/4	1
12	254469	MACINA-16 DENTI DI ROTTURA-	GRINDER BLADE	4
13	266989	GRUPPO POMPA-MOTORE 24V	PUMP-MOTOR UNIT 24V	1
14	266966	O-RING Ø11.11X14.67	O-RING Ø11.11X14.67	2
15	251755	FILTRO CAFFE' DIAM.42	COFFEE FILTER-DIA 42-Z3/4000	1
16	261474	VITE M4X10 CON FRENAFILETTI	FILTER SCREW - M4X10 - Z4000	1
17	251757	GUARNIZIONE OR AL SILICONE	SILICONE OR SEAL GASKET	1
18	256748	PISTONE INF. 10MM Z4000 ES/FB	BOTTOM PISTON 10MM Z4000 ES/FB	1
19	267105	GRUPPO 5EV 2+2+2+2+2V 24V	GROUP 5EV 2+2+2+2+2V 24V	1

