


# IDEARESTYLE

## Cleaning Guide

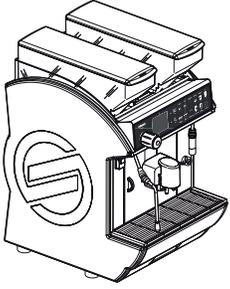

The different wash cycles listed below do not replace the need to disassemble the components for regular sanitization.

### ACCESSING THE PROGRAMMING MENU

Press the Menu button on the control panel.

Enter password by pressing the UP or DOWN buttons to select a number.

Press OK to select the menu option required to perform the maintenance.



## PERFORMING A WASH CYCLE

### BREW GROUP WASH

- 1 In the Programming Menu, select the “Maintenance” option, then the GROUP RINSING submenu. (The GROUP RINSING submenu can also be accessed by selecting *Washing Menu* under the “Technical” option.)
- 2 Press on the OK button (screen will display “PUT THE TABLET INTO THE GROUP”).
- 3 Remove the brew group (screen will display “INS. BREW GROUP.”) (Fig. 1)
- 4 Insert a brew group cleaning tablet into the brew group.



**Use only coffee machine-specific products.**  
**Follow the dosing directions on the product packaging.**

- 5 Reinstall the brew group (screen will display “CLOSE SERV. DOOR”), then close the door. (Fig. 2)

The machine will automatically start performing a wash cycle. Screen will display “REMOVE THE GROUP AND RINSE IT WITH WATER” when wash cycle is completed.

- 6 Remove the brewer group (screen will display “INS. BREW GROUP.”) (Fig. 1)
- 7 Wash the brew group under running water.
- 8 Reinstall the brew group (screen will display “CLOSE SERV. DOOR”), then close the door. (Fig. 2)
- 9 When screen displays “RINSING COMPLETED PRESS OK”, press the OK button.
- 10 Remove and empty the drip tray, then reinstall it. **Do not drink this water.**

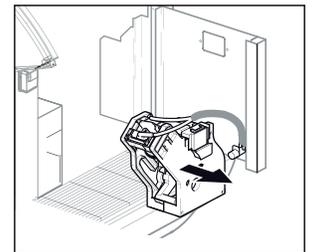


Fig. 1

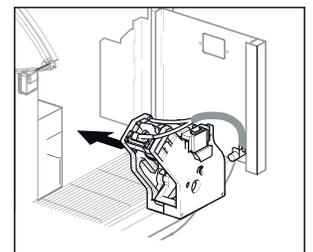


Fig. 2

### RECOMMENDED PRODUCT



Cafection | Evoca recommends using CAFIZA tablets from Urnex, or equivalent cleaning product.

Make sure to always follow the product manufacturer's instructions.

Product code: 20ACC22

## CLEANING MILK COMPONENTS

### COFFEE DISPENSING SPOUT & CAPPUCCINATORE


- 1 Remove the upper protection cover by pulling it outwards.
- 2 Remove the fork and the crema adjusting lever.
- 3 Unscrew the lower knob to remove the lower protection cover.
- 4 Remove the fitting connecting the milk tube to the Cappuccinatore connector, then remove the milk dispensing spout and the milk tube.
- 5 Remove the Cappuccinatore casing and the Cappuccinatore body cap.
- 6 Remove the temperature adjusting lever.
- 7 Remove the coffee dispensing spout by pulling it outwards and dismantle it.
- 8 Wash all parts in cleaning solution using a small brush.



**Use only milk system and coffee machine-specific products. Follow the dosing directions on the product packaging.**

**Make sure to mechanically remove all visible residues and films**

- 9 Rinse with running water and thoroughly dry all the parts.
- 10 Reinstall all parts in reverse order.

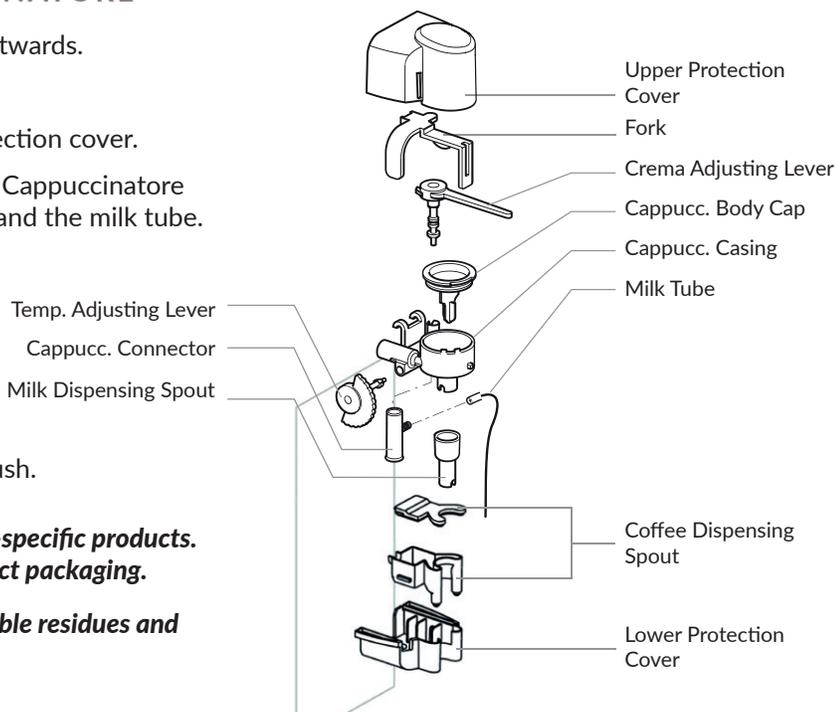

### TUBES CLEANING CYCLE

- 1 Immerse the milk tube into a container with water and press on the Milk button. (Fig. 1)



**Do not use hot water.**

- 2 During the cleaning cycle process, clean the cooling unit with a soft cloth. (Fig. 2)
- 3 At the end of the cycle, remove and empty the container. **Do not drink this water.**
- 4 Replace the milk tube inside cooling unit.



**Make sure the milk tube is correctly positioned so it is supplied with milk.**

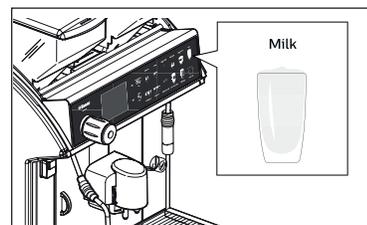


Fig. 1

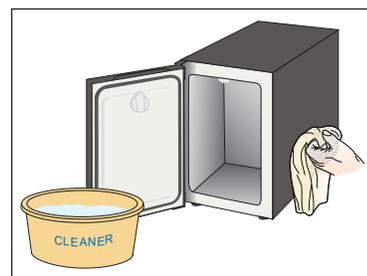


Fig. 2



## RECOMMENDED PRODUCT

Cafection | Evoca recommends using Milk System Cleaning Tablets from Evoca, or equivalent cleaning product.

Make sure to always follow the product manufacturer's instructions.

Product code: 962961