



LA RADIOSA -USA-
 01 - Door

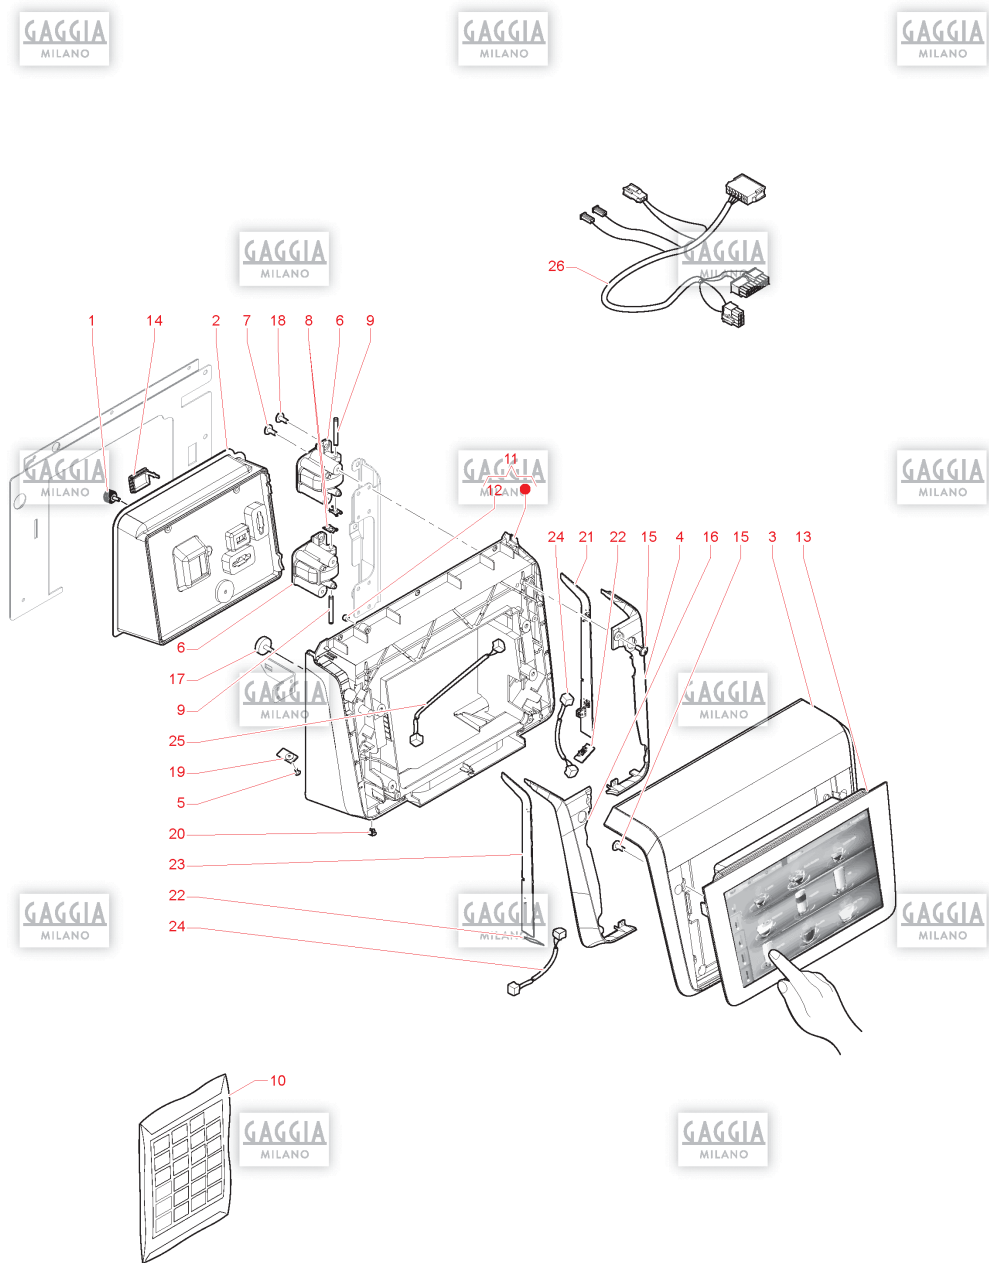

Pos.	Code	Replaced By	Description
1	252384		KNOB M4X10
2	262551		CARD COVER
3	262567		FRONT ASSY - LA SOLARE

4	262553	RIGHT DOOR LIGHTING FRAME
5	987628	EJOT-PT-SCREW 3X8
6	256253	DOOR HINGE
7	258628	SELF-TAPPING SCREW. 4X15
8	259375	FASTENING CLIP
9	256256	DOOR HINGE PIN
10	B-1758	CONFORM. PLATE CFT600 USA
10	257782	PROTECTIVE LABEL
11	262569	DOOR STRUCTURE ASSEMBLY
12	0V3126	MAGNET - ALL M/C
13	264344	TOUCH ASSEMBLY -USA-
14	260944	USB CAP - KREA/KALEA/LR
15	255034	SELF TAPPING SCREW - M4X12
16	262550	LEFT DOOR LIGHTING FRAME
17	262545	D.22 MAGNET
18	255937	SCREW M4X14
19	257345	LED SPOTLIGHT BOARD
20	262554	DISPENSING COMPARTMENT LED GLASS SHEET
21	262562	RIGHT RGB LED CARD
22	262564	BOTTOM RGB LED CARD
23	262563	LEFT RGB LED CARD
24	262558	TOP/BOTTOM RGB LED CARD
25	262559	LH/RH RGB LED CARD WIRING
26	262555	RGB LED WIRING


LA RADIOSA -USA- 02 - Cabinet

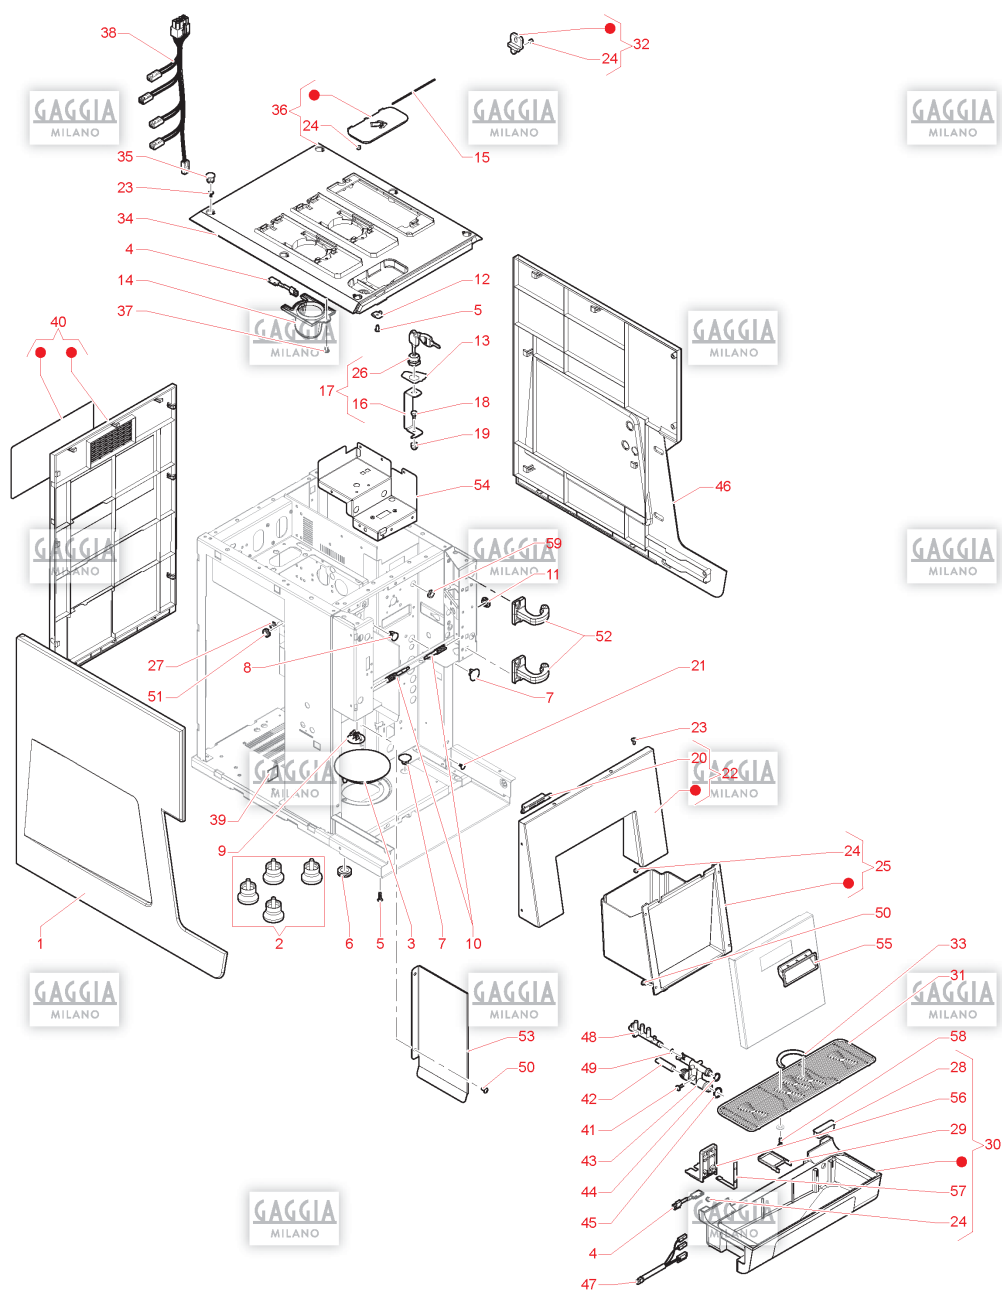

Pos.	Code	Replaced By	Description
1	261706		LEFT SIDE - LR/LS
2	254182		4 FEET H=100
2	253290		4 FEET KIT - LR/LS
3	255267		CABINET CAP - KR/SO/KA/LR

4	251860		SENSOR - K RANGE
5	255724		SELF-TAPPING SCREW 4X8
6	090020		WHIPPING MM 16
7	257546		CAP D.24
8	256163		CAP -BLACK-
9	0V4199		PLUG
10	256255		DOOR FIXING PIN - KAR/KAL
11	261703		UNIT SIDE CAP
12	256252		REED SUPPORT FOR DOOR
13	258617		LOCK REINFORCEMENT PLATE
14	261926		TOP INTERMEDIATE - COFFEE SHUTTER - BLACK-
15	256257		DECAF DOOR HINGE PIN
16	256381		LATCH DOOR LOCK
17	256373		LOCK MERONI WITH LATCH
18	252501		SCREW WITH COLLAR
19	091703		SELF-BLOCKING NUT M4
20	253323		MAGNET
21	097298		FASTEX CLIP
22	261100		DISPENSING COMPARTMENT ASSEMBLY
23	255029		SCREW M4X10
24	0V3126		MAGNET - ALL M/C
25	262790		COFFEE WASTE BUCKET
26	252137		DOOR LOCK
27	261014		D.7 RUBBER CABLE GLAND
28	256383		SPLASH GUARD - KAR/KAL/LR
29	256382		DRIP TRAY - KAR/KALEA/LR
30	262366		LIQUID BASIN ASSEMBLY - LR
31	256259		DRIP TRAY GRILL - KAR/KAL
32	258849		DOOR MAGNET KEY ASSEMBLY
33	255734		CUP LOCATOR - GRILL
34	262570		TOP 2EX.+IN.
35	262547		SCREW CAP
36	262571		DECA DOOR
37	255034		SELF TAPPING SCREW - M4X12
38	256343		WIRING TOP
39	094989		SELF-STICKING FIXING
40	262518		UNIT BACK WITH LOGO
41	255027		SELF-TAPPING SCREW 3,9X6,5
42	259630		TRANSP. HOSE D. 2M-KAR/KAL/LR
43	256300		WASTE LIQUID BASIN
44	256294		GASKET -WASTE- KAR/KAL/LR
45	256295		GASKET -WASTE- KAR/KAL/LR
46	261707		RIGHT SIDE - LR/LS
47	262560		LEVEL/PRESENCE SENSOR
48	256299		COUPLING WASTE
49	257998		OR 2037 9.25X1.78
50	255028		HINGE SCREW - SN/KAR/7100/9100
51	0V2127		RUBBER BUSHING D.10
52	256254		UNIT HINGE
53	261598		COFFEE PAD CHUTE
54	264872		POWDER DOSING MOTOR SUPPORT
55	0V3659		HANDLE
56	262369		DRIP TRAY - LA RADIOSA
57	262368		DRIP TRAY CONTACT - LA RADIOSA
58	260448		FLANGED SCREW M4X6


**LA RADIOSA -USA-
03 - Electric system**

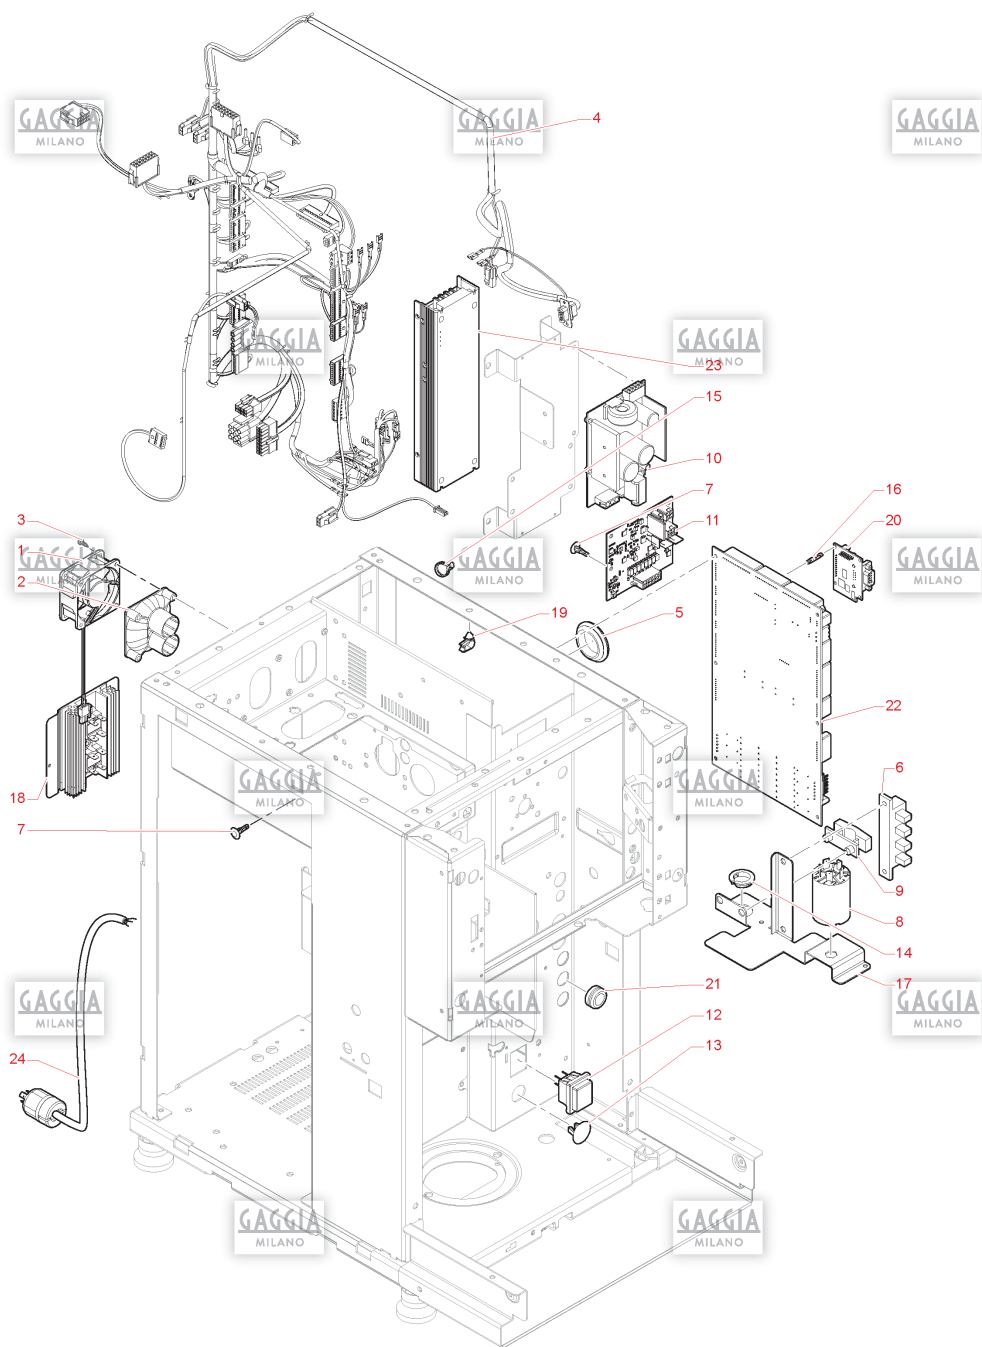

Pos.	Code	Replaced By	Description
1	260024		FAN - KR/KAR/CAN/KO/KA/LR
2	256306		FLANGE FAN
3	260177		CYLINDRICAL CROSSHEAD SCREW-HFZ M3X45
4	264334		GENERAL WIRING -USA-

5	098600		CHOCK
6	262847		TERMINAL BOX
7	097175		CARD SPACER
8	0V3512		ELECTRICAL NET FILTER **
9	253058		WIRE CLIP
10	261919		POWER BOARD - KREA TOUCH
11	264338		PUMP BOARD -USA-
12	252180		SWITCH - KO/KAR/KR/LR
13	257546		CAP D.24
14	0V3166		BUSHING
15	090148		CLIP
16	257543		SUPPORT CARD
17	262840		TERMINAL BOX AND FILTER SUPPORT
18	264339		HEATSINK ASSEMBLY
19	098166		WIRE-FIXING
20	261191		PAYMENT CARD - LR/LS
21	090021		RUBBER BUSHING 10.5 MM
22	261239		NOW USE 265408
23	262561		POWER SUPPLY -ORC/LR - R290
24	264336		POWER WIRING -USA-

LA RADIOSA -USA- 04 - Hydraulic system

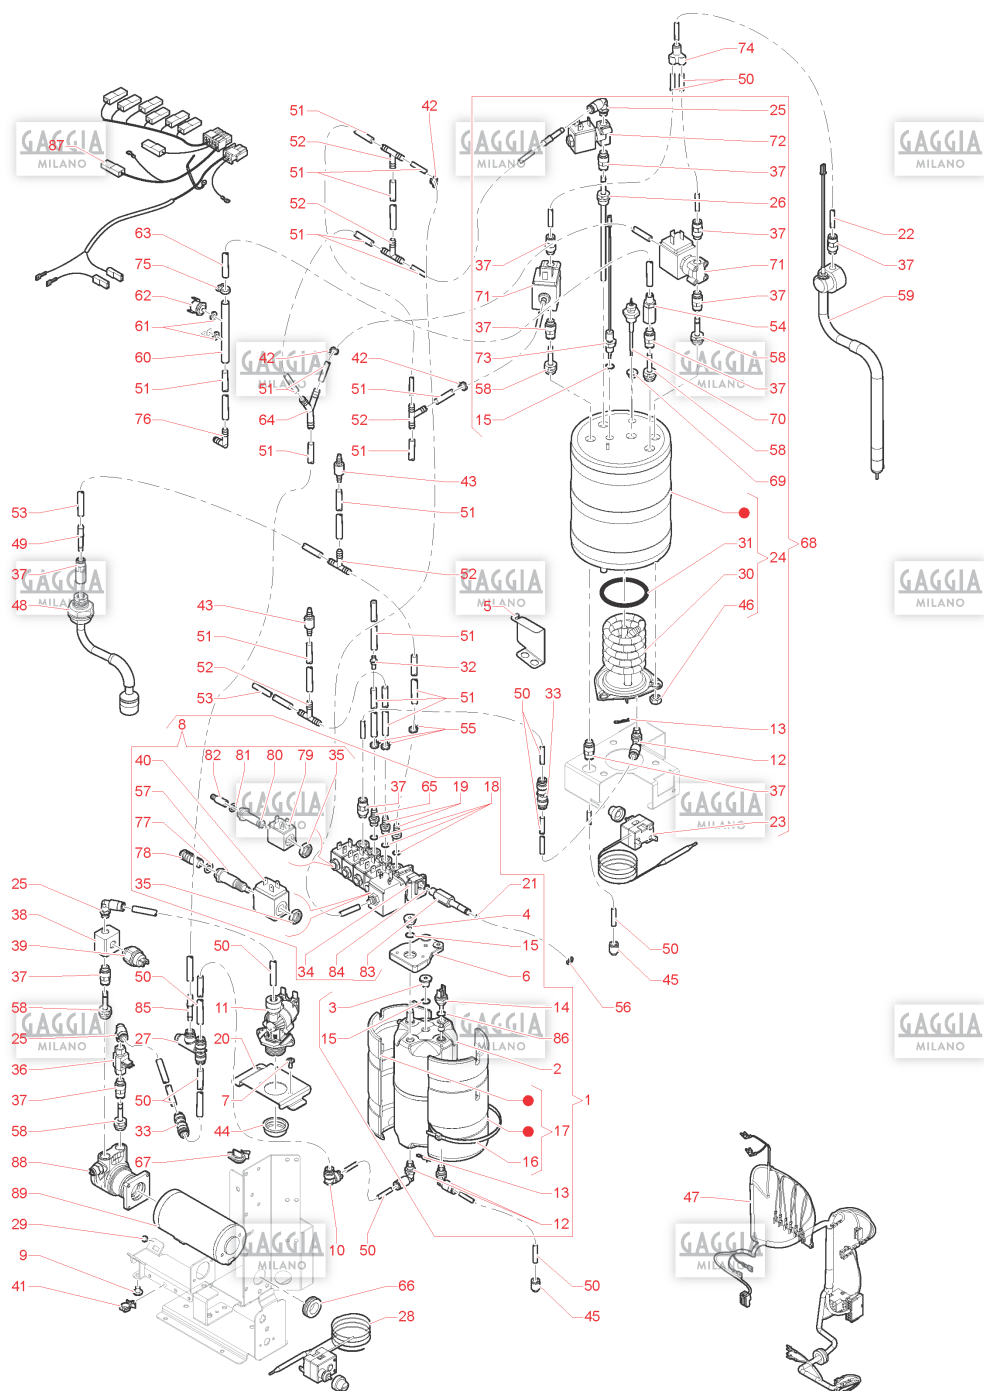


Pos.	Code	Replaced By	Description
1	264345		ESPRESSO BOILER ASSEMBLY 5EV.2500W
2	256366		BOILER ASSY 2500W - LR/KA
3	261357		BOILER CAP - KA/KR/LR/OP/MA

4	261358	BOILER FITTING - OP/KAR/91/LR
5	264510	NON-RETURN VALVE SUPPORT
6	255772	TOP PLATE - BOILER - KR/KA/LR
7	255029	SCREW M4X10
8	259928	BOILER VALVE - OP/KR/KAL
9	262803	RUBBER WASHER
10	262474	L-SHAPED FITTING
11	264321	WATER INLET - KALEA/LS
12	258904	6-1/8 L-SHAPED JOINT WITH O-RING
13	258827	FASTENING CLIP
14	264671	TEMP. PROBE - FER/KAR/OP/91/KAET-
15	257077	O RING - FE/KAR/KO/OP/91
16	258915	39X5CM CLAMP
17	261758	RH AND LH INSULATION - KAR
18	094594	GASKET O-RING 2031
19	095529	RUBBER HOLDER UNION 1/8" (BRASS)
20	261319	SOLENOID VALVE SUPPORT WATER INLET
21	094611	BOILER GASKET - Z2000
22	255539	PIPE - 4X6 - KAR/FER/9100
23	261709	THERMOSTAT 165°C
24	264343	1.5L 2700W 230V BOILER ASSEMBLY
25	256280	L CONNECT - KA/91/KAL/LR
26	260019	ADAPTER WITH HOSE G1/4 ID 4 L=123
27	264316	SAFETY VALVE 12BAR PPSU TEF-6-6
28	257593	THERMOSTAT CAMPINI 155°C
29	987703	SOCKET PEDESTAL
30	253049	2700W-50HZ RESISTANCE
31	254187	HEATING ELEMENT GASKET NSF
32	0V2058	BRACKET WATER CONNECTION
33	264315	NON-RETURN VALVE PPSU TEF-6-6
34	260534	BASE PLATE WITH 5 SOLENOID INSERT-FOR WAND-
35	259402	COIL FASTENING NUT
36	261525	VOLUMETRIC COUNTER -1.2-KAL/LR
37	257047	FITTING STRAIGHT CYL. 6-1/8
38	257344	SWITCH SUPPORT - FER/KA/LR
39	256347	PRESSURE SWITCH - KAL/FER/LR
40	255571	LARGE COIL - KR/SO/OP/KA/LR
41	0V4200	CABLE RETAINER
42	258815	PIPE CLAMP COLLAR
43	258779	CHECK VALVE - OP/KA/KAR/LR
44	099815	STOPPER
45	262537	FEMALE CAP D.6
46	259498	M8 HEX NUT
47	264335	SHELF WIRING -USA-
48	256369	WAND HOT WATER
49	258914	D.7 QUICK COUPLING D.6 HOSE CONNECTION
50	252658	TEFLON PIPE 3X6 (A METER)
51	097510	SILICONE HOSE 5X9 BROWN
52	094231	UNION T-SHAPE - ALL M/C
53	254565	SILICONE HOSE 5X9 -BLUE-
54	264346	3BAR-F/M-1/8G SAFETY VALVE
55	094329	HOSE CLIP
56	093171	OUTER FIXING COLLAR DIAM MM6
57	298093	COFFEE-VALVE CONNECTION PIPE
58	260020	ADAPTER ID 4 G1/4
59	264347	"COLDTOUCH" STEAM WAND WITH PROBE
60	099458	TUBE FOR 2 THERMOSTAT
61	094597	COPPER WASHER

62	0V2129	THERMOSTAT 82 C
63	097512	SILICONE HOSE 6X12 BROWN
64	093963	UNION Y-SHAPE DIAM 8 OUTER
65	261654	HOSE FITTING - KALEA PLUS
66	090020	WHIPPING MM 16
67	098166	WIRE-FIXING
68	264342	1.5L STEAM BOILER ASSEMBLY -USA-
69	257243	PLUG G1/8+OR
70	254196	LEVEL PROBE NSF
71	261962	24V 3-WAY SOLENOID -D.3-
72	262801	2 WAY SOLENOID - KAR/KALEA/LS
73	264095	NEGATIVE TEMPERATURE COEFFICIENT (NTC) STEAM PROBE ASSEMBLY
74	261701	FITTING "Y" D.6 -FAST COUPLING-
75	256631	PIPE CLAMP - FER/KAR
76	256920	UNION 'L' D.8
77	298192	OR 2026 SEAL
78	097472	3-WAY ELECTROVALVE NUCLEUS -VITON-
79	257106	VALVE COIL - OP/9100/KR/SO/LR
80	258874	2 WAY VALVE PIE - KR/CA/LR/91
81	099059	VALVE-BUSH-GASKET
82	099058	NUCLEUS INSTANT-E.V.
83	254333	BOILER NOZZLE - KAR/KAL/LR
84	257998	OR 2037 9.25X1.78
85	259998	D.7 HOSE CONNECTION COUPLING D.6
86	11013173	OR ORM 0090-20 FKM 80 FD GREENPEROXIDA
87	264337	STEAM WIRING -USA-
88	262710	CONNECTION JOINT
88	261526	PUMP - KAL/LR
89	262767	PUMP 24 VDC MOTOR

LA RADIOSA -USA-
05 - Mixer and canister

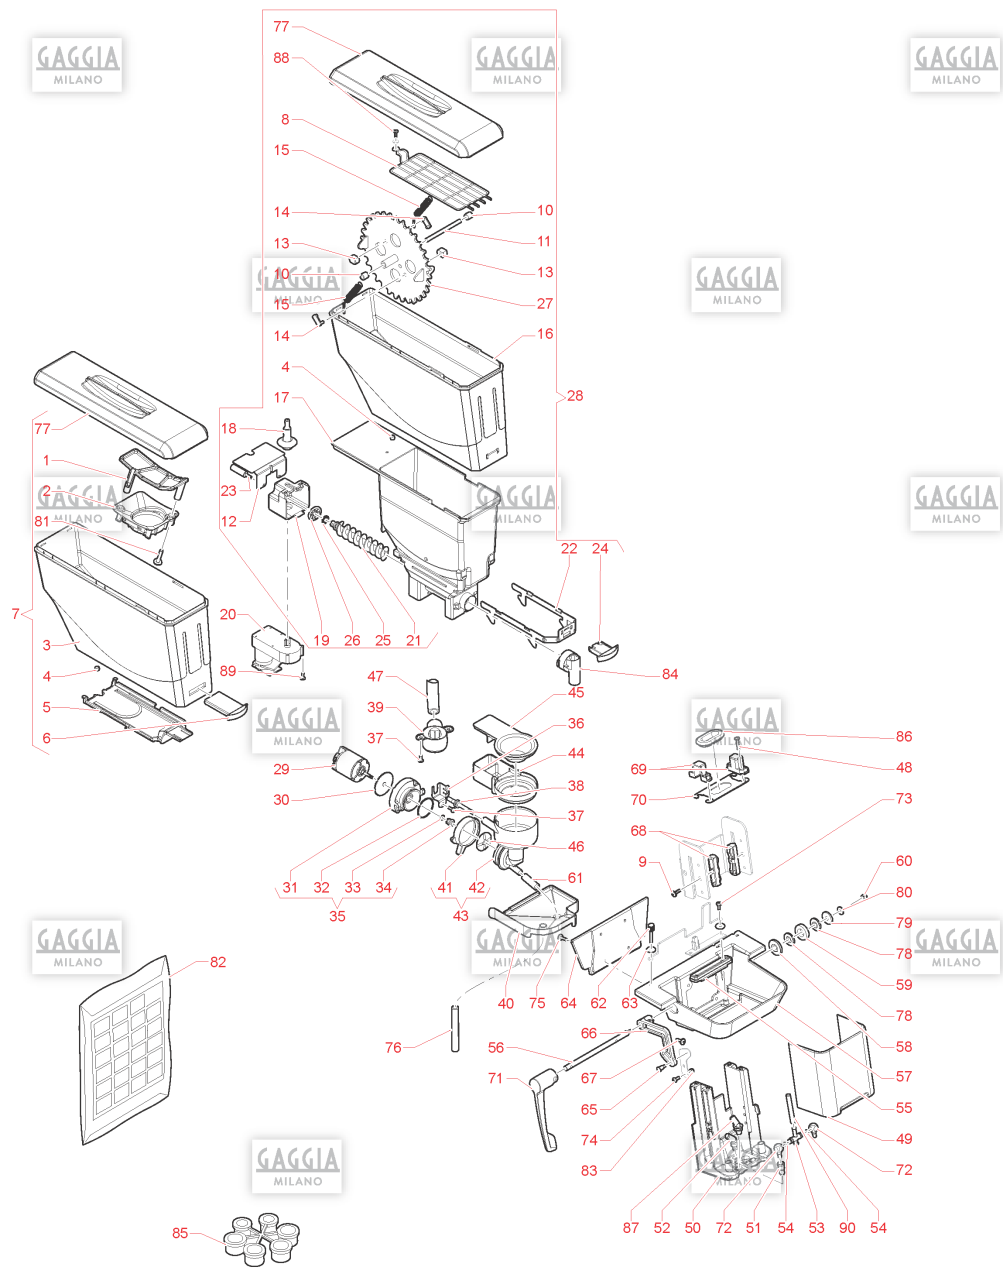


Pos.	Code	Replaced By	Description
1	265412		COFFEE HOOD PROTECTION - LS
2	256291		BASE COFFEE CONTAINER
3	256148		COFFEE CONTAINER BODY

4	0V3126	MAGNET - ALL M/C
5	256302	SHUTTER COFFEE
6	256301	LEVER SHUTTER MOVEMENT
7	264341	CAFFE' NERO HOPPER ASSEMBLY -USA-
8	256258	CANNISTER PROTECTION - KALEA
9	255034	SELF TAPPING SCREW - M4X12
10	252681	SPACER
11	256304	PIN FOR TOOTHED WHEEL
12	262841	POWDER COVER
13	262845	SPRING FASTENER NUT
14	262844	SPRING FASTENER
15	256261	BEATER SPRING
16	256150	SOLUBILES CONTAINER BODY
17	256293	INTERIOR POWDER CONTAINER
18	0V2527	PINION
19	256307	SUPPORT POWDER. CONTAINER PINION
20	256355	INGREDIENT MOTOR - LS/LR/LB
21	0V2523	SHORT SCROLL L=10.7CM
22	257234	BLOCK POWDER CONTAINER
23	262843	SAW TOOTH SCREW M4X10 -AISI-
24	256303	LEVER POWDER CONTAINER LOCK
25	252662	GASKET O-RING 109-NSF-
26	0V2525	GEAR
27	095936	WHEEL
28	264340	SOLUBLE HOPPER ASSEMBLY -USA-
29	264333	24V MOTOR BLENDER
30	099889	MIXER WHEEL - ALL M/C
31	258618	MIXER FLANGE - K RANGE
32	0V0776	O-RING 3125
33	0V0775	O-RING 106
34	097917	BUSH SEAL - WHIPPER
35	251869	MIXER FLANGE
36	252931	SPOUT SUPPORT
37	255493	SCREW M4X10
38	255787	MIXER NOZZLE D=2.3 9-11CC
39	256305	FLANGE SUCTION PIPE
40	256290	BASIN MIXER
41	298003	MIXER LOCKING RING NUT
42	251769	MIXER CONVEYOR - K RANGE
43	251874	MIXER CONVEYOR - K RANGE
44	256325	BOX EXTRACTION
45	251767	SUCTION TRAY COVER
46	252729	MIXER WHEEL - KO/GM/PM
47	259848	CORRUGATED HOSE 17X21.2 -BLACK-
48	256493	SCREW SELF-TAPPING 4X20
49	262367	NOZZLE COVER ASSEMBLY
50	256312	SUPPORT MOVABLE NOZZLES-2 ES-
51	256262	COFFEE NOZZLE
52	255117	SOLUBLE POWDER NOZZLE
53	256315	DIVERTER COFFEE NOZZLE
54	094611	BOILER GASKET - Z2000
55	256335	GLASS PANEL FOR NOZZLE LED
56	256267	PIN MOVING NOZZLE CONTROL
57	262552	MOBILE NOZZLE FRAME
58	256297	DISC CLUTCH
59	298064	BUMPER SPINDLE
60	986614	NUT FLANGED
61	254565	SILICONE HOSE 5X9 -BLUE-

62	253303		KNURLED NUT M4X35
63	093716		PLATE WASHER SELECTION OPENING
64	260468		NOZZLE SHIM
65	261096		LEVER DRIVE PIN - KALEA/LR
66	260805		MOBILE NOZZLE INNER LEVER
67	36170303		STAINLESS STEEL PHILLIPS SCREWPH M4X16
68	256319		GUIDE SHOE MOVABLE NOZZLES
69	260806		MOBILE NOZZLE SUPPORT EXTENSION
70	262544		NOZZLE REINFORCEMENT
71	256802		LEVER MOBILE NOZZLES
72	256314		COFFEE NOZZLE WIDE
73	255724		SELF-TAPPING SCREW 4X8
74	255029		SCREW M4X10
75	255937		SCREW M4X14
76	097685		SILICONE HOSE BROWN 7,5X12
77	264070		COFFEE BELL COVER GLOSSY -NSF-
78	261259		WASHER 9X24
79	096988		WASHER
80	259223		TOOTHED WASHER
81	261153		SCREW M4X20
82	097502		CANNISTER LABEL - ALL M/C
83	091703		SELF-BLOCKING NUT M4
84	262911		PIERCED ROUND STRAIGHT OPENING
85	257151		NOZZLE EAR PROTECTIONS
86	098600		CHOCK
87	260455		FRESH BREW TILTED NOZZLE
88	255036		PLAIN TIP SELF-TAPPING SCREW 4X12 -INOX-
89	264873		SELF TAPPING SCREW 2,9X19
90	254566		SILICONE HOSE 3X6 -BLUE-


**LA RADIOSA -USA-
06 - Grinder doser unit**

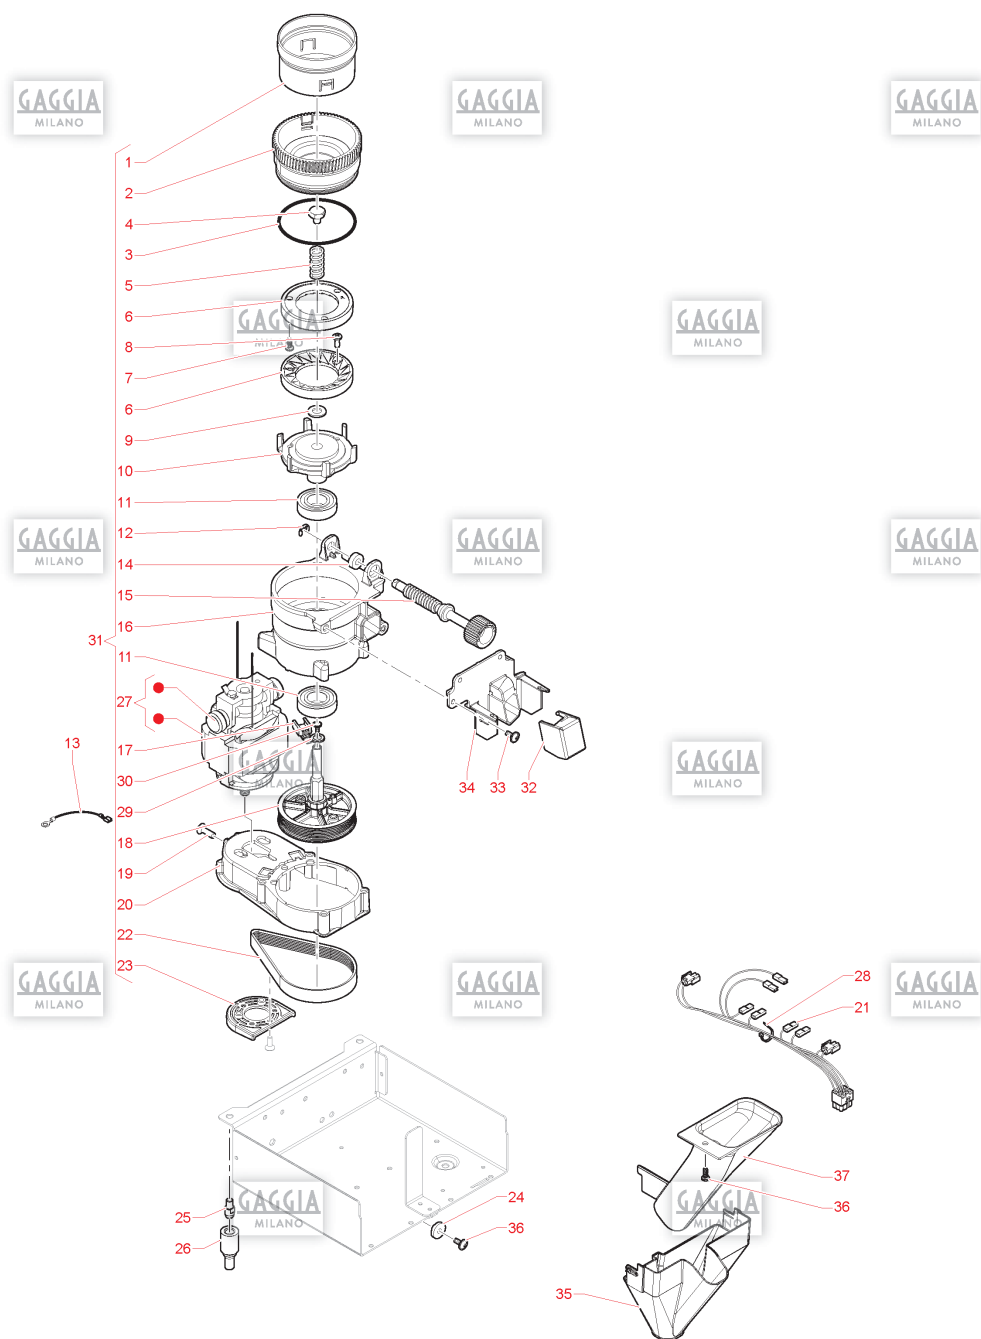

Pos.	Code	Replaced By	Description
1	259801		GRINDER INTERFACE
2	259800		LOWERED UPPER GRINDER HOLDER
3	095805		GASKET O-RING
4	252378		LEFT-HAND SCREW THREAD

5	099471		SPRING
6	254469		GRINDER BLADE-KOB/CA/KA/91/LR
7	252918		SCREW 4X10 -INOX-
8	252917		SCREW -INOX-
9	252916		WASHER -INOX-
10	298145		GRINDER-HOLDER FAN
11	298155		RADIAL BEARING - ALL M/C
12	093171		OUTER FIXING COLLAR DIAM MM6
13	262846		EARTH WIRING
14	099457		RUBBER WASHER GRINDER - 9100
15	099474		REGULATION SCREW
16	298168		2 GRINDERS CAP -2 COFFEE-
17	251778		FEELER BOARD - KO/71/SO/OP/91
18	298151		PULLEY ASSEMBLY - GRINDER
19	298143		SCREW M5X16
20	298147		REDUCER BODY
21	258723		GRINDER WIRING -UL-
22	298152		GRINDER BELT - CA/KR/OP/91/LR
23	298144		BELT SLIDE
24	259751		GRINDER SHELF LOCKING BUSHING
25	258805		DOUBLE GRINDER PIN
26	099484		LITTLE RUBBER
27	264331		GRINDER MOTOR -UL-
28	090148		CLIP
29	255491		WASHER 4.3X12
30	257058		SCREW TSPC-H M3X6
31	264332		GRINDER ASSEMBLY 208-240V
32	251961		COFFEE EXIT SHUTTER
33	255029		SCREW M4X10
34	259752		COFFEE CONVEYOR
35	263093		DOUBLE CONVEYOR -VERS. W/O DOSER-
36	255937		SCREW M4X14
37	256321		DECAFF CHUTE - KAR/KAL/LR

**LA RADIOSA -USA-
07 - Coffee unit 21GR**

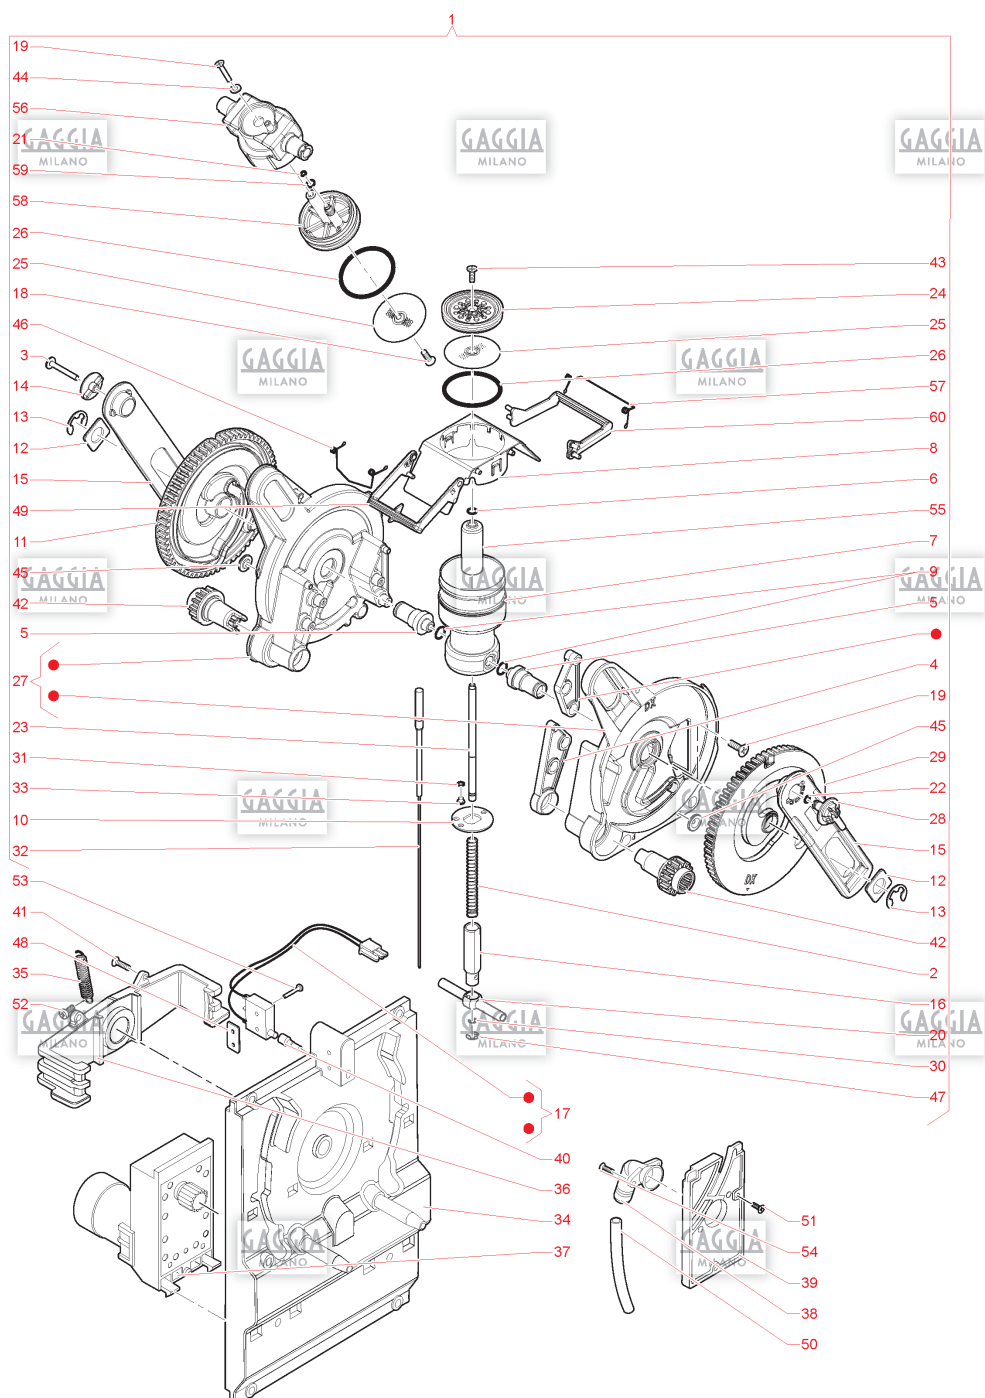


Pos.	Code	Replaced By	Description
1	264393		Z4000 BREWER - 21G - LS
2	098688		PISTON RETURN SPRING - BREWER
3	255031		SELF-TAPPING SCREW 4,2X26
4	264221		FRONT THICKNESS

5	264398		CHAMBER COLUMN -Z4000 STAINLESS STEEL-
6	0V0782		O RING - Z4000 BREWER
7	264397		STAINLESS STEEL CHAMBER Z400021 GR
8	264226		21GR STAINLESS STEEL CHAMBER SLIDES
9	257077		O RING - FE/KAR/KO/OP/91
10	264253		CHAMBER LOCKING FLANGE
11	254675		LEFT CRANK D.46
12	254654		GUIDE SLIDING BLOCK-Z4000-LR
13	096569		FIXING COLLAR DIAM 12
14	254655		UPPER PISTON KEY
15	254665		CONNECTING ARM - BREWER
16	264256		STEM GUIDE -Z4000 STAINLESS STEEL-
17	298173		SWITCH & HARNESS - Z4000
18	259503		SCREW M4X12 -STAINLESS STEEL-
19	256493		SCREW SELF-TAPPING 4X20
20	264394		CHAMBER ROD GUIDE PIN
21	254650		GASKET - Z4000
22	094611		BOILER GASKET - Z2000
23	263061		PISTON ROD
24	264225		LOWER PISTON Z4000 21GR
25	264396		COFFEE FILTER Ø47,8 - LS
26	264399		BREWER SEAL- LA SOLARE
27	254678		RH-LH BREWER SUPPORT D.46
28	254795		COFFEE DISPENSING SPOUT-Z4000
29	254674		RIGHT CRANK D.46 -Z4000-BREWER
30	098818		STOPPING RING D.4
31	256296		GASKET OR 2015 1,78X3,68
32	263066		10W / 24VDC HEATER- LS
33	264257		CHAMBER CAP -Z4000 STAINLESS STEEL-
34	256326		PLATE Z4000 NE
35	253220		LEVER SPRING - ALL M/C
36	254805		Z4000 D.46 GROUP COUPLER
37	254552		BREWER MOTOR - CA/KR/KAR/LR
38	256387		FLANGE STEAM EXTRACTION
39	256410		REINFORCEMENT GROUP+SUCTION PLATE
40	255084		PIN - BREWER - Z4000 - 9100/LR
41	255937		SCREW M4X14
42	264224		PINION GROUP Z4000 21GR
43	261474		FILTER SCREW - M4X10 - Z4000
44	255491		WASHER 4.3X12
45	254667		RETAINER WASHER
46	260144		DOUBLE SCRAPER SPRING
47	091287		OUTER FIXING COLLAR
48	30448800		MICRO FASTENING PLATE 7100
49	264228		UPPER PISTON SCRAPER
50	259848		CORRUGATED HOSE 17X21.2 -BLACK-
51	258628		SELF-TAPPING SCREW. 4X15
52	987628		EJOT-PT-SCREW 3X8
53	09004002		SCREW M2X12
54	255034		SELF TAPPING SCREW - M4X12
55	264258		STOP OR PISTON ROD
56	264223		UPPER PISTON CROSSBAR
57	264395		LOWER SCRAPER SPRING
58	264222		UPPER PISTON - LA SOLARE
59	253984		GASKET OR 2021
60	264227		LOWER PISTON SCRAPER

LA RADIOSA -USA- 08 - Preventive Maintenance_1

KIT "A": 25000 / 75000 DOSES

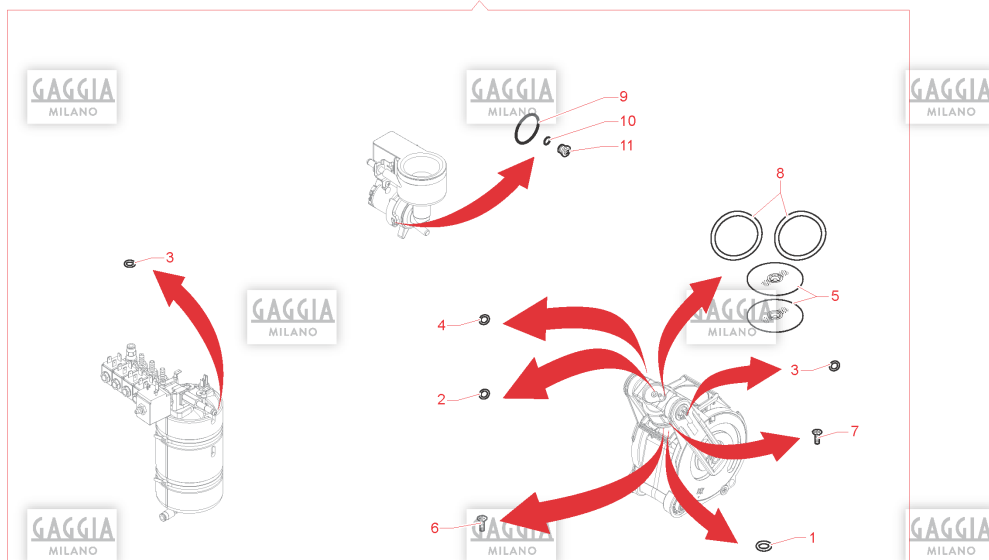

Controlli generali

- controllare i contenitori polveri: svuotare i contenitori, pulire con detergente neutro, sostituire eventuali componenti danneggiati anche se non presenti in questo esploso.
- controllare il vassoio scarico liquidi: pulire con detergente neutro, controllare il tubo scarico liquidi se presente, verificare il corretto funzionamento del sensore di presenza del vassoio liquidi.
- controllare il contenitore scarico caffè: pulire con detergente neutro, verificare il corretto funzionamento del sensore di presenza del contenitore scarico caffè.
- controllare l'erogazione delle bevande: verificare che la qualità/quantità dell'erogato in tazza rispetti i requisiti standard.
- controllare il tubo ingresso acqua: verificare la presenza di perdite e/o danni al tubo.
- controllare/sostituire il filtro addolcitore dell'acqua.


General checks:

- check the powder canisters: empty the canisters, clean with neutral detergent, if present replace any damaged component that is not included in the kit.
- check the liquid drip tray: clean with neutral detergent, check the liquid discharge tube if mounted, verify the correct operation of the liquid drip tray presence sensor.
- check the coffee grounds bin: clean with neutral detergent, verify the correct operation of the coffee grounds bin presence sensor.
- check the programmed beverages erogation: verify that the quality of doses delivered from the machine has the required standard.
- check the water inlet tube: verify the presence of leaks and possible crush of the tube.
- check/replace the water filter-softener.

Pos.	Code	Replaced By	Description
1	0V0782		O RING - Z4000 BREWER
2	254650		GASKET - Z4000
3	094611		BOILER GASKET - Z2000

4	253984		GASKET OR 2021
5	264396		COFFEE FILTER Ø47,8 - LS
6	261474		FILTER SCREW - M4X10 - Z4000
7	259503		SCREW M4X12 -STAINLESS STEEL-
8	264399		BREWER SEAL- LA SOLARE
9	0V0776		O-RING 3125
10	0V0775		O-RING 106
11	097917		BUSH SEAL - WHIPPER

LA RADIOSA -USA- 09 - Preventive Maintenance_2

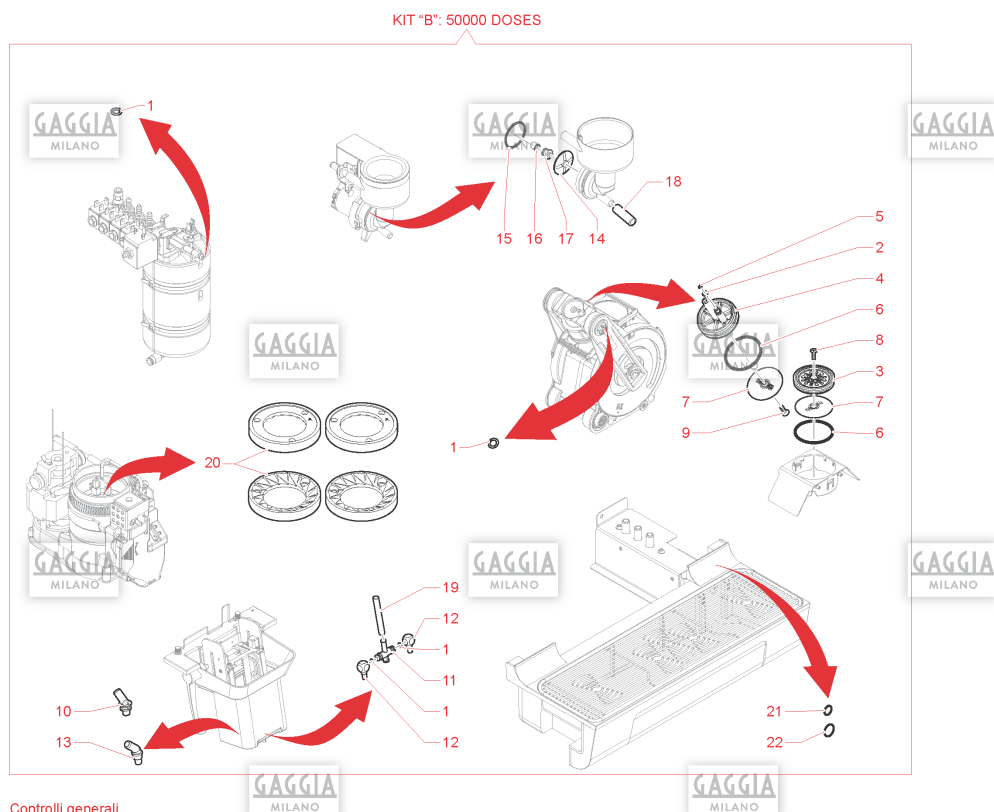

Controlli generali

- controllare i contenitori polveri: svuotare i contenitori, pulire con detergente neutro, sostituire eventuali componenti danneggiati anche se non presenti in questo esploso.
- controllare il vassoio scarico liquidi: pulire con detergente neutro, controllare il tubo scarico liquidi se presente, verificare il corretto funzionamento del sensore di presenza del vassoio liquidi.
- controllare il contenitore scarico caffè: pulire con detergente neutro, verificare il corretto funzionamento del sensore di presenza del contenitore scarico caffè.
- controllare l'erogazione delle bevande: verificare che la qualità/quantità dell'erogato in tazza rispetti i requisiti standard.
- controllare il tubo ingresso acqua: verificare la presenza di perdite e/o danni al tubo.
- controllare/sostituire il filtro addolcitore dell'acqua.


General checks:

- check the powder canisters: empty the canisters, clean with neutral detergent, if present replace any damaged component that is not included in the kit.
- check the liquid drip tray: clean with neutral detergent, check the liquid discharge tube if mounted, verify the correct operation of the liquid drip tray presence sensor.
- check the coffee grounds bin: clean with neutral detergent, verify the correct operation of the coffee grounds bin presence sensor.
- check the programmed beverages erogation: verify that the quality of doses delivered from the machine has the required standard.
- check the water inlet tube: verify the presence of leaks and possible crush of the tube.
- check/replace the water filter-softener.

Pos.	Code	Replaced By	Description
1	094611		BOILER GASKET - Z2000
2	253984		GASKET OR 2021
3	264225		LOWER PISTON Z4000 21GR

4	264222	UPPER PISTON - LA SOLARE
5	254650	GASKET - Z4000
6	264399	BREWER SEAL- LA SOLARE
7	264396	COFFEE FILTER Ø47,8 - LS
8	261474	FILTER SCREW - M4X10 - Z4000
9	259503	SCREW M4X12 -STAINLESS STEEL-
10	260455	FRESH BREW TILTED NOZZLE
11	256315	DIVERTER COFFEE NOZZLE
12	256314	COFFEE NOZZLE WIDE
13	255117	SOLUBLE POWDER NOZZLE
14	252729	MIXER WHEEL - KO/GM/PM
15	0V0776	O-RING 3125
16	0V0775	O-RING 106
17	097917	BUSH SEAL - WHIPPER
18	254565	SILICONE HOSE 5X9 -BLUE-
19	254566	SILICONE HOSE 3X6 -BLUE-
20	254469	GRINDER BLADE-KOB/CA/KA/91/LR
21	256294	GASKET -WASTE- KAR/KAL/LR
22	256295	GASKET -WASTE- KAR/KAL/LR

LA RADIOSA -USA- 10 - Preventive Maintenance_3

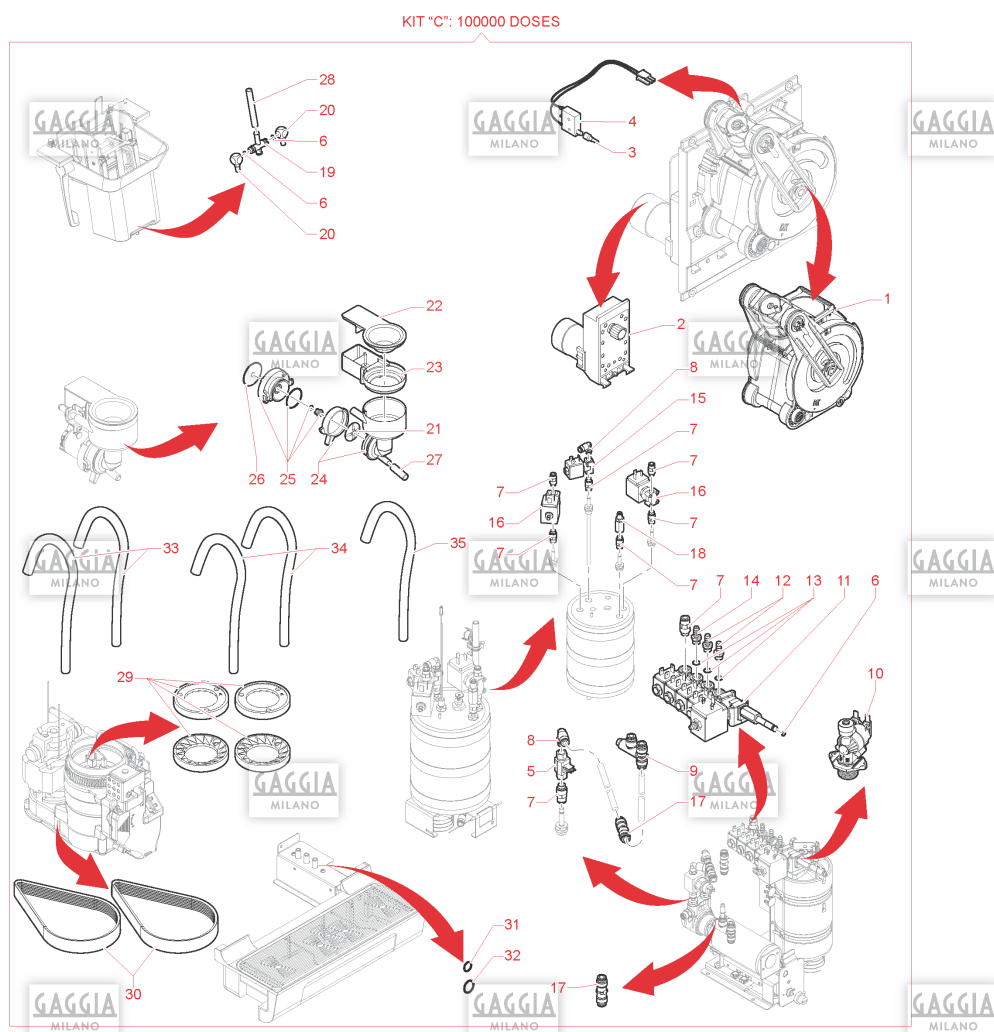

Controlli generali

- controllare i contenitori polveri: svuotare i contenitori, pulire con detergente neutro, sostituire eventuali componenti danneggiati anche se non presenti in questo esploso.
- controllare il vassoio scarico liquidi: pulire con detergente neutro, controllare il tubo scarico liquidi se presente, verificare il corretto funzionamento del sensore di presenza del vassoio liquidi.
- controllare il contenitore scarico caffè: pulire con detergente neutro, verificare il corretto funzionamento del sensore di presenza del contenitore scarico caffè.
- controllare l'erogazione delle bevande: verificare che la qualità/quantità dell'erogato in tazza rispetti i requisiti standard.
- controllare il tubo ingresso acqua: verificare la presenza di perdite e/o danni al tubo.
- controllare/sostituire il filtro addolcitore dell'acqua.

General checks:

- check the powder canisters: empty the canisters, clean with neutral detergent, if present replace any damaged component that is not included in the kit.
- check the liquid drip tray: clean with neutral detergent, check the liquid discharge tube if mounted, verify the correct operation of the liquid drip tray presence sensor.
- check the coffee grounds bin: clean with neutral detergent, verify the correct operation of the coffee grounds bin presence sensor.
- check the programmed beverages erogation: verify that the quality of doses delivered from the machine has the required standard.
- check the water inlet tube: verify the presence of leaks and possible crush of the tube.
- check/replace the water filter-softener.

Pos.	Code	Replaced By	Description
1	264393		Z4000 BREWER - 21G - LS
2	254552		BREWER MOTOR - CA/KR/KAR/LR
3	255084		PIN - BREWER - Z4000 - 9100/LR

4	298173	SWITCH & HARNESS - Z4000
5	261525	VOLUMETRIC COUNTER -1.2-KAL/LR
6	094611	BOILER GASKET - Z2000
7	257047	FITTING STRAIGHT CYL. 6-1/8
8	256280	L CONNECT - KA/91/KAL/LR
9	264316	SAFETY VALVE 12BAR PPSU TEF-6-6
10	264321	WATER INLET - KALEA/LS
11	259928	BOILER VALVE - OP/KR/KAL
12	095529	RUBBER HOLDER UNION 1/8" (BRASS)
13	094594	GASKET O-RING 2031
14	261654	HOSE FITTING - KALEA PLUS
15	262801	2 WAY SOLENOID - KAR/KALEA/LS
16	261962	24V 3-WAY SOLENOID -D.3-
17	264315	NON-RETURN VALVE PPSU TEF-6-6
18	264346	3BAR-F/M-1/8G SAFETY VALVE
19	256315	DIVERTER COFFEE NOZZLE
20	256314	COFFEE NOZZLE WIDE
21	252729	MIXER WHEEL - KO/GM/PM
22	251767	SUCTION TRAY COVER
23	256325	BOX EXTRACTION
24	251874	MIXER CONVEYOR - K RANGE
25	251869	MIXER FLANGE
26	099889	MIXER WHEEL - ALL M/C
27	254565	SILICONE HOSE 5X9 -BLUE-
28	254566	SILICONE HOSE 3X6 -BLUE-
29	254469	GRINDER BLADE-KOB/CA/KA/91/LR
30	298152	GRINDER BELT - CA/KR/OP/91/LR
31	256294	GASKET -WASTE- KAR/KAL/LR
32	256295	GASKET -WASTE- KAR/KAL/LR
33	252658	TEFLON PIPE 3X6 (A METER)
34	097510	SILICONE HOSE 5X9 BROWN
35	097512	SILICONE HOSE 6X12 BROWN

